

# **SSL Native V6**

## **User Guide**

### Document History

May 2018  
September 2018

Software Release V6.0.0  
Software Release V6.1.0

# Contents

<b>Introduction</b>	<b>1</b>
Welcome to the World of SSL	1
About This Manual	1
About the SSL Plug-In Range	2
Channel Strip	2
Bus Compressor	2
X-Comp	3
X-EQ	4
Vocalstrip	5
Drumstrip	6
X-ValveComp	7
X-Saturator	8
X-Phase	9
FlexVerb	10
<b>1. Software Setup</b>	<b>11</b>
System Requirements	11
Windows	11
Mac	11
Buying Plug-ins	12
SSL Webstore	13
Activating Plug-in Licenses	14
Installing the Software (Mac)	15
Installing the Software (Windows)	16
<b>2. Channel Strip</b>	<b>17</b>
Introduction	17
Interface Techniques	18
Input Section	18
Equaliser Section	19
Dynamics Section	20
Compressor/Limiter	20
Expander/Gate	20
Dynamics Values	21
Side-chain Processing Order	21
Channel Processing Order	21
Output Section	21
Input and Output Metering	22
Presets	22
A-B Comparisons	22
<b>3. Bus Compressor</b>	<b>23</b>
Introduction	23
Interface Techniques	23
Control Parameters	23
Presets	24
A-B Comparisons	24
<b>4. X-Comp</b>	<b>25</b>
Introduction	25
Interface Techniques	25
Automation	25
Control Parameters	26
Plug-in Bypass	26
Knee	26
Max GR	26

Bleed	27
Auditioning Bleed Bands	27
Compressor Values	27
Input and Output Sections	28
Compression Law Graph	28
Bleed Graph	28
I/O Difference Graph	28
GR History	28
Presets	29
A-B Comparisons	29
<b>5. X-EQ</b>	<b>30</b>
Introduction	30
Interface Overview	30
EQ Graph Display	30
Input and Output Sections	31
Interface Techniques	31
Automation	31
EQ Configuration	32
Plug-in Bypass	32
Presets	32
A-B Comparisons	32
Analyse	32
Parallel	33
EQ Parameter Values	33
EQ and Filter Shapes	34
Bell Shapes	34
Shelving Bands	35
Filter Shapes	35
EQ History	36
An Audio Engineer's Best Friend	36
The Best of the Analogue and Digital Worlds	36
Analogue Parametric EQ Modelling	36
Non Linear-phase EQ	37
Parallel Passive EQ	37
<b>6. Vocalstrip</b>	<b>38</b>
Introduction	38
Interface Overview	38
Plug-in Bypass	38
Presets	39
A-B Comparisons	39
Automation	39
Input and Output Sections	39
Vocalstrip Modules	40
De-esser	40
Equaliser	40
Compander	41
Processing Order	42
<b>7. Drumstrip</b>	<b>43</b>
Introduction	43
Interface Overview	43
Plug-in Bypass	43
Automation	43
Presets	44
A-B Comparisons	44
Automation	44
Input and Output Sections	44
Drumstrip Modules	45

Gate	45
Transient Shaper	45
HF and LF Enhancers	46
Listen Mic Compressor	47
Processing Order	47
<b>8. X-ValveComp</b>	<b>48</b>
Introduction	48
Interface Overview	48
Automation	48
Plug-in Bypass	49
Presets	49
A-B Comparisons	49
Input and Output Levels	49
Knee	50
Valve In	50
Side-chain	50
Mix	50
Auto Gain	50
<b>9. X-Saturator</b>	<b>51</b>
Introduction	51
Interface Overview	51
Automation	51
Plug-in Bypass	51
Input and Output Levels	52
Boost +6dB	52
Drive	52
Harmonics	52
Depth / Shape	52
Presets	53
A-B Comparisons	53
<b>10. X-Phase</b>	<b>54</b>
Introduction	54
Interface Overview	54
Automation	54
Plug-in Bypass	54
Input and Output Levels	55
Delay	55
All-pass In	55
All-pass Phase	55
Frequency	55
Filter	55
Q Factor	55
Stereo Version	55
Presets	56
A-B Comparisons	56
Phased by Phase?	57
The All-pass Filter Idea	58
<b>11. FlexVerb</b>	<b>59</b>
Introduction	59
Interface Overview	59
Automation	59
Plug-in Bypass	59
Presets	60
A-B Comparisons	60
Early Reflections and Reverb Tail Selection	61
Reverb Tail Control Section	61
3-Band Reverb Time Multipliers	61

6-Band EQ  
Input Side-Chain Compressor  
Mix

61  
62  
62

# Introduction

## **WELCOME TO THE WORLD OF SSL**

Congratulations on purchasing SSL's Native plug-ins. SSL Native delivers a taste of the SSL mix experience – powerful channel and dynamics processing, the legendary Stereo Bus Compressor, plus a variety of contemporary audio tools developed by SSL to provide you with extensive processing versatility.

SSL Native is the result of our unique understanding of SSL's sonic heritage coupled with years of DSP development.

## **ABOUT THIS MANUAL**

This manual starts with a complete overview of the processes involved to install and authorise your plug-ins, then goes into a detailed description of all nine of the plug-ins in the SSL Native range.

Please note that the procedures involved in loading and using plug-ins within your host application are not covered in this manual. Please refer to your host application's user guide for more information on how to use plug-ins in general.

## ABOUT THE SSL PLUG-IN RANGE

### Channel Strip

SSL were the first mixing console manufacturer to feature dynamics and EQ on every channel on an in-line console with the SL 4000 B Series in 1977. The Channel Strip plug-in is based on the EQ and dynamics sections of SSL's analogue consoles. The plug-in includes separate high and low pass filters, an independent compressor/limiter and gate/expander, a four-band parametric equaliser that is assignable to the dynamics side-chain, variable processing order as well as input and output gain adjustment and phase inversion.



### Bus Compressor

The Bus Compressor plug-in is based on the legendary centre section bus compressor found on SSL's large-format analogue consoles. It provides high quality stereo compression, giving you critical control over the dynamic range of audio signals.



Uses may include inserting the bus compressor over a stereo mix, which has the effect of 'gluing' the mix together whilst still maintaining a big sound. The dynamics of drum overheads or whole drum kits can be controlled very effectively with the bus compressor. As it is available as either a stereo or mono plug-in the bus compressor can be used for practically any application that requires superior compression.

## X-Comp

X-Comp can deliver the transparent audio finesse of a mastering-grade stereo compressor or be driven to inject character and raw power to rival the SSL Listen Mic Compressor. In X-Comp we haven't just modelled a particular compressor, but have provided a set of features and controls that allow the emulation of many vintage and modern compression designs based on a well-loved SSL feed forward compressor algorithm.



### Key Features

- Dual-symmetrical knee design allows detailed shaping of the compression characteristic.
- Advanced side-chain architecture using 1st order filters delivers user-friendly frequency dependant parallel compression.
- Amplitude Histogram and Gain Reduction history displays provide advanced real-time pre/post signal analysis.
- Max Gain Reduction control provides genuine vintage compressor characteristics.
- Intuitive user interface with drag and move graphic, mouse wheel and numeric editing.
- A/B facility for instant comparison of two different compression settings.
- Proprietary preset management functions providing compatibility between all DAW platforms.
- Global latency-free bypass.
- Superb mastering-grade audio quality delivered by SSL's 64-bit floating point engine.
- Preset library based on settings used by industry-leading mix engineers.

## X-EQ

X-EQ is the unique all-in-one EQ collection built from the ground up for SSL Native. It has an unprecedented clarity, smoothness, and excellent high-frequency response. There are 10 filter bands all with switchable EQ types and tones, split into dedicated HP and LP filters, LF and HF shelves and 6 bell bands. A Parallel EQ mode is also provided which recreates the characteristic sound of an old parallel passive EQ circuit built with inductors and capacitors.



### Key Features

- 10 band fully parametric high quality digital EQ.
- A total of 16 different filter types: 5 different cut filters, 9 bell shapes, shelving filters and a parallel mode.
- Extensive control options including draggable EQ graph nodes, mouse wheel adjustment and numerical data entry.
- Extremely low noise and low non-linear distortion filter algorithms resulting in the residual THD+N significantly lower than 24-bit quantisation noise.
- Comprehensive stereo/mono peak (with clip-hold), RMS and dynamic history metering at input and output.
- Different bell filter types are all normalised to look identical at +6dB boost allowing for quick comparison between filter types.
- Proprietary preset management functions providing compatibility between all major DAW platforms.
- A/B functionality for easy comparison of any two settings.
- Individual band bypass.
- Global latency-free bypass.
- Real-time FFT Analyser showing the result of the EQ processing on the audio spectrum.
- Superb mastering-grade audio quality delivered by 64-bit floating point engine.
- Preset library based on settings used by some of the world's top mix engineers.

## Vocalstrip

Vocalstrip is a one-stop solution for superior vocal processing, with all the tools you need to take your vocal sound into the major league. Vocalstrip features four configurable processing blocks to take care of unwanted artifacts, dynamics and equalisation, and extensive metering and visual feedback give you invaluable information during your work.



### Key Features

- Intelligent De-esser.
- Intelligent De-ploser.
- Three-band EQ.
- Compressor featuring compression, downwards expansion and output drive.
- Extensive visual feedback including a real-time FFT analyser showing the result of the EQ processing on the audio spectrum.
- Complete control over process order.
- Extensive control options including mouse wheel adjustment and numerical data entry.
- Proprietary preset management functions providing compatibility between all DAW platforms.
- A/B functionality for easy comparison of any two settings.
- Global latency-free bypass.
- Superb mastering-grade audio quality delivered by a 64-bit floating point engine.
- Preset library based on settings used by some of the world's top mixing engineers.

## Drumstrip

The Drumstrip plug-in brings a unique blend of tools to the SSL Native platform, which provides an unprecedented amount of control over the transient and spectral elements of drum and percussion tracks. Manipulation that previously may have been time-consuming or impossible with traditional EQ and dynamics processing becomes elegant and rewarding with the SSL Drumstrip.



### Key Features

- Transient shaper capable of drastically changing the attack characteristics of rhythmic tracks. An audition mode makes for easy setup.
- Highly controllable gate featuring both open and close thresholds, attack, hold, release and range control.
- SSL Listen Mic Compressor with extra functionality.
- Separate high and low frequency enhancers provide spectral control not achievable with traditional EQ.
- Peak and RMS metering on both input and output.
- Wet/dry controls on both the main output and the LMC allow parallel processing to be easily dialled in.
- Process order control over all five sections gives complete flexibility over the serial signal chain.
- Latency-free bypass of all processing.

## X-ValveComp

X-ValveComp is a fully-featured channel compressor with valve emulation, side-chain with filters and a wet/dry “Mix” control for parallel processing.



### Key Features:

- Mode: Switches between Peak & RMS response.
- Input side-chain filtering.
- Valve In switch; introduces a tube compressor emulation for saturating the signal by adding harmonics.
- Auto make-up gain.
- Threshold, ratio, adjustable knee.
- Mix control for parallel compression.

## X-Saturator

X-Saturator allows the user to introduce harmonic distortion to a signal to add some pleasing “analogue character”. The X-Saturator emulates analogue gain circuits that introduce harmonic distortion when driven and can act as a veritable time machine of processing sounds, covering everything from smooth tube harmonics to screaming crushed techno sounds.



### Key Features:

- Emulates analogue gain circuits.
- The Drive controls the input level of the plug-in.
- By adjusting the Harmonics control the distortion characteristics can be shifted from 50's valve-style overdrive (if the Harmonics selection control is turned fully anti-clockwise for 2nd harmonic distortion) to 70's transistor-style grit (if the Harmonics selection control is turned fully clockwise for 3rd harmonic distortion).
- Depth and Shape control the amount of harmonics injected back into the signal, enriching the sound.
- Boost adds 6dB of headroom to avoid internal clipping.
- Dry/Wet allows parallel processing.

## X-Phase

X-Phase is an all-pass filter and time alignment tool for manually adjusting the phase. It can be used to time/phase align signals, for example from a stereo set of overhead mics on a drum kit.



*Mono Version*



*Stereo Version*

### Key Features

- X-Phase is an all-pass filter and time alignment tool for manually adjusting the phase.
- The gain is linear across the frequency range, but a change in phase is applied such that it ‘wraps’ at a specific frequency and converges to 0 for all other frequencies.
- The Q-Factor of the filter will adjust the rate of phase-change across the frequency spectrum.
- 2nd Order inverts the filter.
- Delay (in various units).
- Link L/R for stereo signals.
- 180 degrees phase shift with All-pass ‘phase’ button.

## FlexVerb

FlexVerb is a fully-featured SSL reverb plug-in designed to get a professional mix-ready sound in a quick and intuitive way. Its split early-late reflection architecture allows you to flexibly add the body and tone of different early room reflections, complimented by the richness of a variety of expansive reverb tail options. Complete with 6-band EQ and input sidechain compressor, FlexVerb is easy to use and an extremely powerful creative tool for the audio professional.



### Key Features:

- Four Reverb Types: Room, Hall, Plate, and Chamber.
- Early & Late Reflection types can be independently selected; for example, Small Room Early Reflections, with a Large Plate Reverb Tail.
- 6 Band SSL EQ, with 3 bands of reverb time multipliers.
- Output compressor (applied to reverb only) side-chained by the 'dry' input signal; useful to help sit in the mix.
- Lockable Dry/Wet Mix control; fix the mix of dry and wet signal when switching between presets.
- Infinity reverb time switch.
- Reverb tail kill switch.
- Graphical display of EQ and reverb time multipliers, including FFT analysis with after-glow.

# 1. Software Setup

## SYSTEM REQUIREMENTS

Before starting the installation process, confirm that your system meets the minimum system requirements to run SSL Native plugins.

### Windows

- Windows 7, (64 bit) 8 (64 bit), 8.1 (64 bit), and Windows 10 (64 bit).
- Intel Core 2 (or comparable) CPU running at 2.4GHz or higher.
- 4GB of RAM minimum, 8GB preferable.
- VST 2(64 bit), VST3 (64 bit), AAX Native (64 bit).

### Mac

- OS X 10.10 Yosemite or higher (32 or 64-bit).
- Intel Dual Core Mac running at 2.4GHz or higher.
- 4GB of RAM minimum, 8GB preferable.
- AU (32 or 64bit), VST2 (32 or 64-bit), VST3 (32 or 64-bit), AAX Native (32 or 64-bit).

You will require an iLok 2 or 3 USB device to use SSL Native plugins.

## BUYING PLUG-INS

SSL Native plug-ins are licensed using an iLok 2 or iLok 3 USB device. In order to purchase SSL Native iLok licenses, go to the [SSL Webstore](#) and login to your SSL account. If you don't have an SSL account, you can create one by following the steps below:

### CREATING AN SSL ACCOUNT

Click on this icon:  then click on **Create New Account** and fill in your details.

You will be sent a password by email. Once you have received this email, you are ready to continue.

[Create new account](#) | [Log in](#) | [Reset your password](#)

## User account

### ACCOUNT INFORMATION

**Username: \***

Spaces are allowed; punctuation is not allowed except for periods, hyphens, and underscores.

**E-mail address: \***

A valid e-mail address. All e-mails from the system will be sent to this address. The e-mail address is not made public and will only be used if you wish to receive a new password or wish to receive certain news or notifications by e-mail.

### LOGGING INTO THE SSL WEBSITE

Click on **LOG IN**, type your username you created and the password sent to you by email and click on the **Log In** button below the password.

[Create new account](#) | [Log in](#) | [Reset your password](#)

## User account

**Username: \***

Enter your MySQL username.

**Password: \***

Enter the password that accompanies your username.

Log in

## SSL WEBSTORE

From the SSL Webstore (found here: <http://store.solidstatelogic.com/>) navigate to the SSL Native Plugins webstore page and click "**Add to Cart**" for each of the plugin licenses you wish to purchase. Complete the check-out and purchase processes.

### SSL Native Plug-ins Product Catalogue

- All prices exclude VAT or Sales Tax.
- All SSL Native plug-ins are available for a 'free fully functional demo' - [click here](#) to find out more
- Before you can use these products you must download and install the SSL Native software. It can be downloaded [here](#).
- All SSL Native plug-ins are available for immediate online purchase. Buying the plug-in(s) will prompt you to enter your iLok account username. The license(s) will appear in this iLok account. You will need to download the latest iLok License Manager from [www.ilok.com](http://www.ilok.com), login to your account, then activate the license(s) onto an iLok 2 or 3 USB device.
- All physical goods will be dispatched within three days of purchase unless otherwise stated. Shipping for the SSL Native Dongle is free.
- Goods are shipped from the UK with all Tariffs and Import Duties remaining the responsibility of the customer.
- You can read the [SSL Native Terms & Conditions](#) here

#### SSL Native Drumstrip

Add to cart



Drumstrip takes drum sounds from ordinary and average to vibrant and exhilarating in a few quick, easy steps.  
**[Read More about](#)**

Price: €179.00

#### SSL Native Essentials Bundle

Add to cart



The classic SSL console sound for your DAW. This bundle includes the **SSL Native EQ & Dynamics Channel** ([Read More](#)) and the **SSL Native Bus Compressor** ([Read More](#)) plug-ins.

Price: €407.00

During the purchase process you will be asked to enter your iLok User ID, then validate it (if it is not already present in your SSL account). If you do not have an iLok account, you can create one here: <https://www.ilok.com/#!registration>

## ACTIVATING PLUG-IN LICENSES


Once you have successfully completed the purchasing process, your licenses will have been deposited in your chosen iLok account and require authorisation onto your physical iLok 2 or 3.

- Open iLok License Manager.
- Log in to your iLok account.
- Connect your iLok 2 or 3 device to the computer. If an unregistered iLok is connected, a popup will appear asking if you would like to add the iLok to your account; select “yes”. The iLok will be registered to your account.
- Activate your SSL License(s) by right-clicking the license you wish to activate and select “Activate”, select a location, and then click the “Activate” button.

---

*Note that only iLok 2 or 3 USB devices are valid license locations*

---

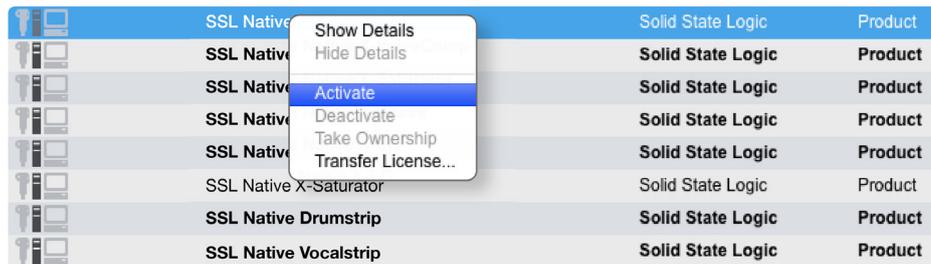

For further information on using your iLok please see here: [www.ilok.com/](http://www.ilok.com/)

## DOWNLOADING THE SOFTWARE

Please download the latest SSL Native software from the SSL Native [Downloads page](#). Note that you do not need to purchase plug-ins in order to download them, although you will need to register on the SSL website and activate the licenses onto your iLok 2 or 3 before use.

### SSL Native plug-ins

SSL console grade processing for your DAW.

[Overview](#) | [Free Demo](#) | [Free Cross Grade](#) | [iLok2 Copy Protection](#) | [Specifications](#) | [Gallery](#) | [Documents](#) | [Downloads](#) | [Tutorials](#) | [FAQ](#) | [Videos](#)

#### Downloads

Please note that these installers contain all 10 SSL Native plug-ins. If you have only purchase a single plug-in and do not wish to demo any of the others, be sure to deselect them when prompted in the installation process.

##### SSL Native Intel Mac (64-Bit)



Software Version: 6.0.0  
Release Date: 01/03/2018  
Download Size: 629 MB

##### SSL Native Intel Mac (32-Bit)



Software Version: 6.0.0  
Release Date: 01/03/2018  
Download Size: 604 MB


##### SSL Native PC (64-Bit)




Software Version: 6.0.0  
Release Date: 01/03/2018  
Download Size: 492 MB

## INSTALLING THE SOFTWARE (MAC)

- Double click the SSL Native disk image file that you downloaded to mount the disk image.
- Run the SSL Native Plug-ins installer and follow the on-screen instructions.

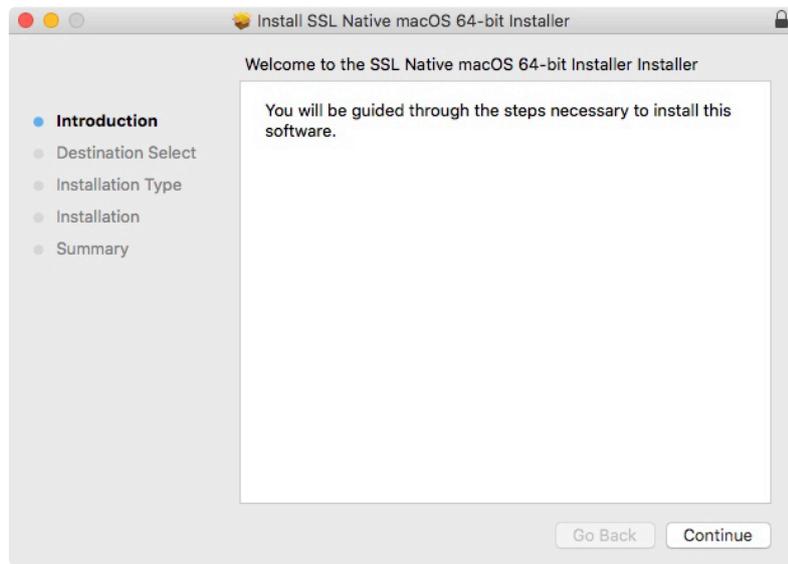

During the installation process you can choose which plug-ins and formats you don't require by unticking the appropriate boxes:

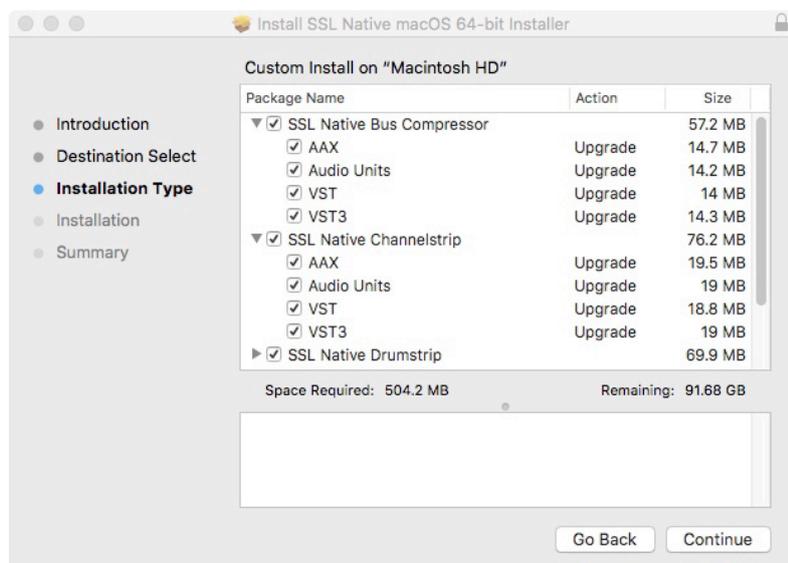

In the disk image you will also find a file named iLok License Support.dmg. If you do not already have the iLok software installed – for example if this is the first time you have used your iLok – you should double click this disk image and run the installer. If you have a newer version of the software already installed you will be notified and prompted to quit the installer.

*If this is the first time you are installing the SSL Native V6 plug-ins you will need to activate the licenses onto your iLok. Please see the 'Activating Plug-In Licenses' section of this user guide for more information.*


Please note that a newer version of iLok License Manager may be available here: <https://www.ilok.com/>

## INSTALLING THE SOFTWARE (WINDOWS)

- Double click the SSL Native zip file that you downloaded to open it.
- Run the SSL Native Setup.exe file and follow the on-screen instructions:



During the installation you can choose which plug-ins and formats you don't require by unticking the appropriate boxes:

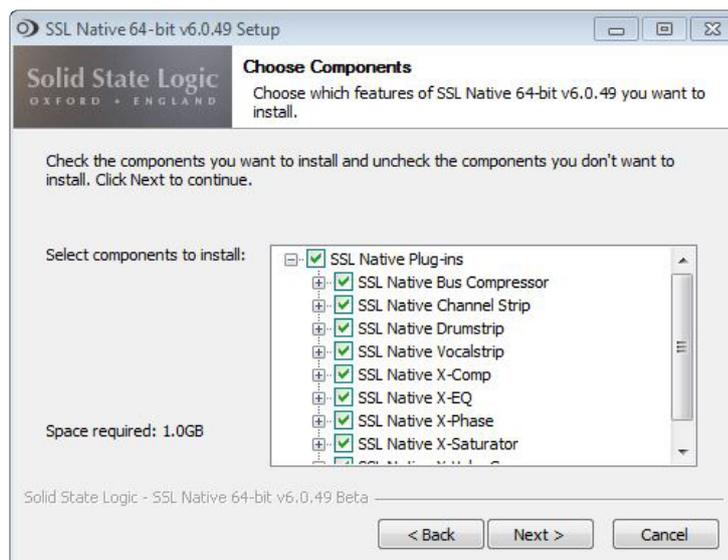

In the zip file you will also find a file named License Support.exe. If you do not already have the iLok software installed - for example if this is the first time you have used your iLok, you should double click this file to run the installer. If you have a newer version of the software already installed you will be notified and prompted to quit the installer.

*If this is the first time you are installing the SSL Native V6 plug-ins you will need to activate the licenses onto your iLok. Please see the 'Activating Plug-In Licenses' section of this user guide for more information.*

Please note that a newer version of iLok License Manager may be available here: <https://www.ilok.com/>

## 2. Channel Strip

### INTRODUCTION

The Channel Strip plug-in provides a complete SSL channel strip, based on the processing blocks of SSL's analogue consoles, and includes high and low pass filters, a four band equaliser, compressor/limiter and gate/expander. The channel strip can run in mono or stereo.

Before examining the plug-in in detail, the diagram below provides an operational overview.



## INTERFACE TECHNIQUES

The following techniques and automation information for controlling the Channel Strip Plug-in are common to all of the SSL Native plug-ins.

- To press a switch in a plug-in, simply click on it. With all plug-ins, an on-screen indication adjacent to or surrounding the switch will indicate when the switch is active.
- To turn a knob, click on it and drag it up and to the right. If your mouse has a scroll wheel, you can also turn knobs by hovering over them and turning the scroll wheel.
- To move a knob slowly for fine adjustments, hold the following on your keyboard whilst turning/scrolling:

Fine Adjust for Host Type	Mac	Windows
AU	⌘ ('Command')	n/a
VST	⌘ ('Command')	Ctrl
VST3	⌘ ('Command')	Ctrl
AAX	⌘ ('Command')	Ctrl

To reset a knob to its default value, click on the knob whilst holding the following on your keyboard:

Reset for Host Type	Mac	Windows
AU	Alt	n/a
VST	Alt	Alt
VST3	Alt	Alt
AAX	Alt	Alt

To view the value for any knob, hover over the knob cap with the mouse.

## Automation

Every plug-in parameter can be automated in host applications that support automation. The method for recording and editing automation varies from host to host. For specific instructions on using automation within the host, consult the host application's documentation.



### INPUT SECTION

Turn the **GAIN** knob to control the level of the incoming audio signal. The post-gain signal level is shown above. Press **Ø** to invert the phase of the input signal.



### FILTER SECTION

There are two filters in the Filter section:


- The upper knob controls an 18dB/Octave high pass filter (20Hz to 500Hz).
- The lower knob controls a 12dB/Octave low pass filter (3kHz to 22kHz).

Filters are inactive when turned fully anti-clockwise (**OUT**). Turn them clockwise to move the filter frequency in from its extremity.

## EQUALISER SECTION

To use the EQ, switch it into circuit by pressing the **EQ IN** switch.

The EQ section has four bands, each with its own knob colour. All bands have gain and frequency control. The low (LF) and high (HF) bands are shelved by default (as shown below) but can be switched to a bell shape (parametric) by pressing the **BELL** button. The low-mid (LMF) and high-mid (HMF) bands also have Q control:

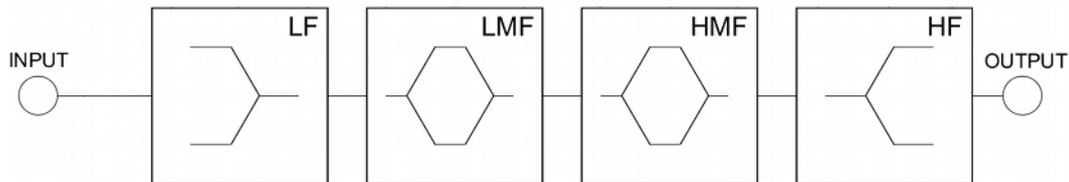


Band	LF	LMF	HMF	HF
Frequency range	40Hz – 600Hz	200Hz – 2kHz	600Hz – 7kHz	1.5kHz – 22kHz
Gain range	±16.5dB	±20dB	±20dB	±20dB
Q range	–	0.5 – 2.5	0.5 – 2.5	–

Press the **E** to switch the EQ emulation from G Series to E Series consoles. The diagrams below display the difference between them:

**G Series:** The bell curve has a more rounded shape at low gains, and the shelf curve overshoots zero slightly at the base of the curve. G Series EQ is more subtle and is generally more suited to instruments and vocals.

**E Series:** The bell curve is slightly more pointed and there is no overshoot on the shelf curve. E Series EQ is more aggressive and is therefore better for removing problem frequencies. It is generally more suited to drums.

*At full boost or cut, both curves are identical.*

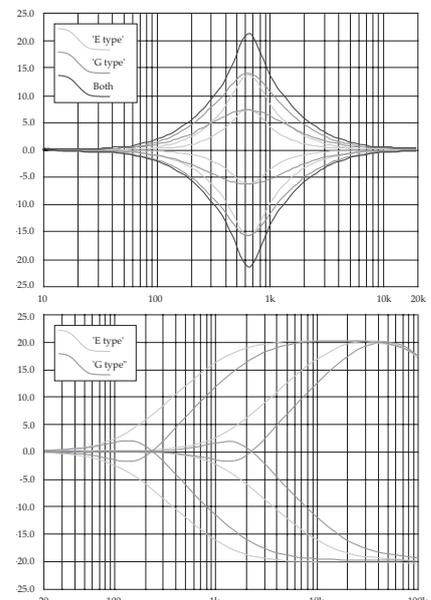

## DYNAMICS SECTION

The Dynamics section includes a Compressor/Limiter and an Expander/Gate. Both sections work independently but can be operational at the same time, providing sophisticated control of signal levels. The diagrams down the right-hand side of the page give a simplified overview what each control represents.

Press **DYN IN** to switch the Dynamics into circuit.

### Compressor/Limiter

To activate the Compressor/Limiter, turn the **RATIO** knob so that it is no longer set to 1:1.

To turn the compressor into a  $\infty$ :1 limiter, turn the knob fully clockwise.



There is no gain make-up control as the **THRESHOLD** knob controls both the level at which gain reduction is introduced and the gain make-up, keeping the output level reasonably steady regardless of the compression.

**RELEASE** controls how quickly the level returns to normal after the input level has dropped below the threshold (measured in seconds). The attack time is adjusted automatically to match the audio. To choose a constantly fast attack time, press the **FAST ATTACK** switch.

Press the **PEAK** button to switch from RMS to peak signal detection. In normal RMS mode the compressor reacts to the average signal level and has a soft knee characteristic. When switched to peak mode, it responds to peak signal level and introduces a hard knee characteristic, resulting in more dramatic compression.

The level of compression being introduced is shown in the left-hand of the two meters in the centre of the Dynamics section.

### Expander/Gate

To activate the Expander/Gate, turn the **RANGE** knob so that it is no longer zero.







The green indicators in the right-hand of the two meters in the centre of the Dynamics section show the amount of gain reduction being introduced.

By default, the Expander/Gate section functions as a gate. To switch to the expander, press the **EXPAND** switch.

The **THRESHOLD** function uses different levels to 'open' the gate to audio and to 'close' it again – the level at which the expander opens is higher than the level at which it closes again. In other words, when the expander is opened, it stays open until the signal level crosses the quieter 'close' threshold. This is known as hysteresis and is very useful as it allows instruments to decay more naturally. The word 'Threshold' normally refers to the 'open' threshold.

**HOLD** controls the delay before the signal level starts reducing again, and **RELEASE** controls how quickly the level then reduces. Note that the **RELEASE** interacts with the **RANGE**, which determines the depth of gain reduction.

The attack time (the time taken for the Expander/Gate to 'recover' once the signal level is above the 'deactivate' threshold) is normally set to 1.5ms per 40dB. Press the **FAST ATTACK** switch to introduce a faster attack time of 100µs per 40dB. This is useful when gating signals with a steep rising edge, such as drums.

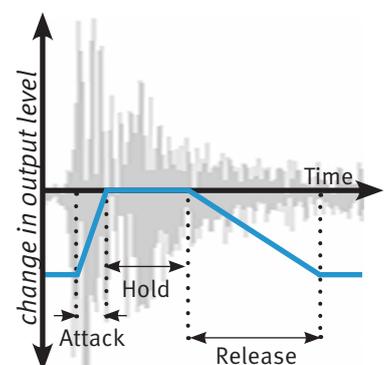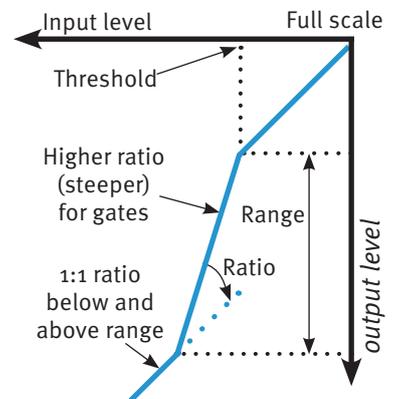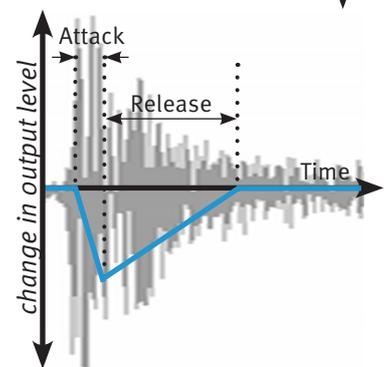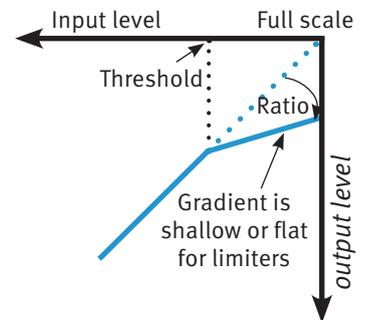

## Dynamics Values

The value ranges associated with the dynamics controls are as follows:

	Ratio	Threshold / Range	Release time	Attack time
<b>Compressor</b>	1:1 to ∞:1	-20dB to +10dB	0.1s to 4s	3ms to 30ms (automatic) 3ms in Fast Attack
<b>Expander</b>	Gate: 40:1 Expander: 2:1	30dB to +10dB Range: 0dB to 40dB	Hold 0s to 4s Release 0.1s to 4s	1.5ms / 40dB 100µs / 40dB in Fast Attack

## Side-chain Processing Order

The EQ and filter sections can be assigned to the Dynamics side-chains, allowing for advanced processes like de-essing. This is done using the **DYNAMICS Side-chain EQ** and **FILTER** switches at the bottom of the plug-in window.



The Process Order display at the base of the plug-in window indicates the side-chain assignments. Both EQ and filter sections can be assigned to the side-chain together, in which case the EQ precedes the filter.

To listen to the signal feeding the side-chain, press the **S/C LISTEN** button in the Output section to route the side-chain signal to the channel output.


---

*Remember to cancel the **S/C LISTEN** button once you have finished auditioning the side-chain!*

---

## CHANNEL PROCESSING ORDER

Signal processing order is shown in the graphic at the bottom of the plug-in window.

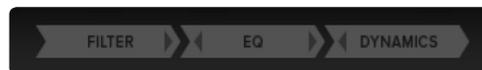

The default plug-in order is **Filters > EQ > Dynamics**.

To change the channel processing order, click on left or right arrows for that section to move it earlier or later in the plug-in signal path.

---

*Please note: EQ > DYNAMICS > FILTER is not possible. This is because on SSL's analogue consoles, if the 'filter to input' switch is not activated, the filter will always occur directly after the EQ section.*

---

## OUTPUT SECTION



The Output section allows you to ensure that the signal retains a good level after all the signal processing. The signal level is shown above the knob.

**S/CHAIN LISTEN** routes the side-chain directly to the output, so you can monitor the side-chain signal.

## Input and Output Metering

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

**Peak Meter**  
Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.



**RMS Meter**  
The thinner bar to the right shows the RMS (average) level over time.


When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/Channelstrip

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\Channelstrip

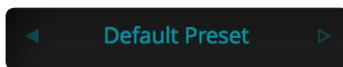

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

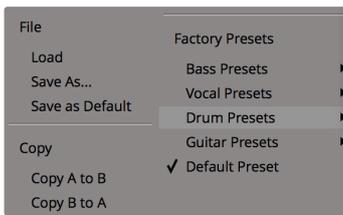

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

# 3. Bus Compressor

## INTRODUCTION

The Bus Compressor plug-in is based on the legendary centre section stereo bus compressor found on SSL's large format analogue consoles. It provides high quality stereo compression for critical control over the dynamic range of audio signals.

The compressor can be run in mono or stereo modes and can be used for practically any application that requires superior compression. For example, place it over a stereo mix to 'glue' the mix together whilst still maintaining a big sound, or use it on drum overheads or whole drum kits for very effective control of drum dynamics.

## INTERFACE TECHNIQUES

The interface techniques for the Stereo Bus Compressor are identical to those for the Channel Strip.

### Automation

Automation support for the Stereo Bus Compressor is the same as for the Channel Strip.

### Control Parameters

Below is a description of the Stereo Bus Compressor's parameters.

The image shows the SSL Native Stereo Bus Compressor interface with several callout boxes pointing to specific controls:


- COMPRESSION METER**: Shows gain reduction in dB. (Points to the meter on the left side of the interface.)
- ATTACK**: Controls response time when Threshold is crossed. Choose between: 0.1, 0.3, 1, 3, 10 and 30ms. (Points to the ATTACK knob.)
- RELEASE**: Controls how quickly level returns to normal. Choose between 0.1, 0.3, 0.6, or 1.2 seconds, or Auto. **Auto**: release time is dependant upon duration of signal peak. (Points to the RELEASE knob.)
- RATIO**: Controls the degree of compression. Choose between: 2:1, 4:1 and 20:1. (Points to the RATIO knob.)
- S/C HPF**: High-pass filter applied to the compressor side-chain. (Points to the S/C HPF knob.)
- MIX CONTROL**: Controls the blend of 'dry' uncompressed signal and 'Wet' compressed signal. (Points to the MIX knob.)
- MIX LOCK**: Excludes the MIX control from the preset management system. (Points to the lock icon next to the MIX knob.)
- THRESHOLD**: Controls level at which gain reduction is introduced. Continuously variable: -20dB to +20dB. (Points to the THRESHOLD knob.)
- MAKE-UP**: Controls level compensation to offset compressor action. Continuously variable: -5dB to +15dB. (Points to the MAKE-UP knob.)
- COMP IN**: Switches the compressor in and out of the signal path. (Points to the COMP IN button.)

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/BusCompressor

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\BusCompressor

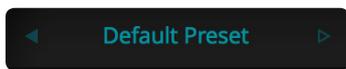

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

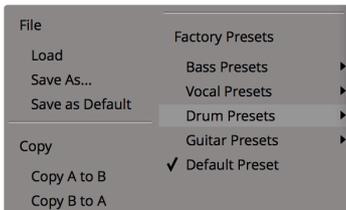

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons




The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

## 4. X-Comp

### INTRODUCTION

The illustration below gives an overview of some of the X-Comp features which are described in full over the following pages.

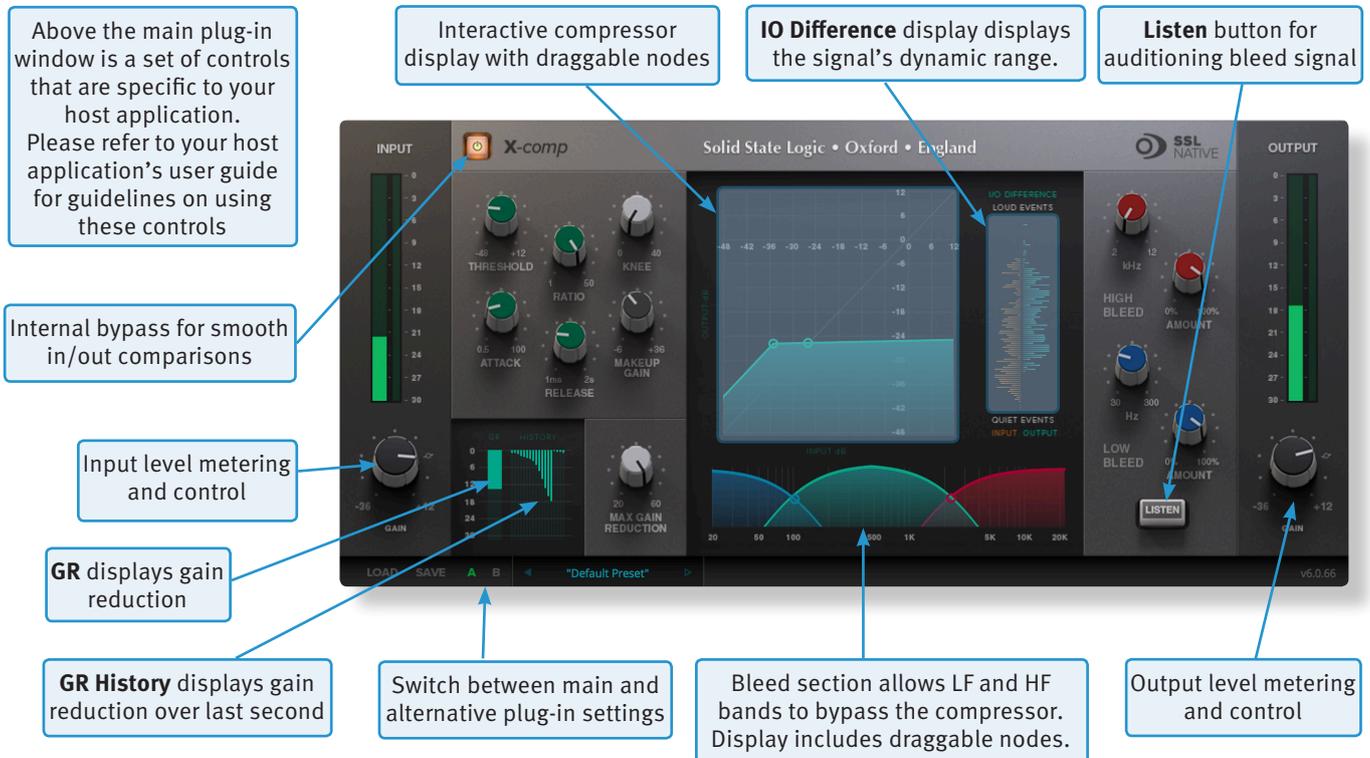

### INTERFACE TECHNIQUES

The basic interface techniques for the X-Comp are largely identical to those for the Channel Strip. In addition to these basic techniques, the following are also available:

**Threshold** and **Ratio** values can also be controlled directly within the compressor display with draggable nodes. Move the nodes to control the Threshold and the Ratio.


The bleed bands can be adjusted in a similar way.

### Automation

Automation support for X-Comp is the same as for the Channel Strip.

## CONTROL PARAMETERS

### Plug-in Bypass

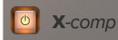

The **power** switch provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding the latency issues associated with the host application's Bypass function.

The button must be 'lit' for the compressor to be in circuit.

### Common Compressor Parameters

The diagrams down the right-hand side of the page give a simplified overview of what each control represents, as shown in the compressor display in the centre of the plug-in window.

#### Knee

The **Knee** controls how focussed the threshold level is:

- With a hard knee (knob at minimum) the compressor's parameters all come into force at precisely the point at which the threshold is crossed. In the **Compression Law** diagram, this is shown by a sharp change in gradient at the threshold.
- With a soft knee, the ratio is introduced gradually, starting below the threshold and reaching its full value above the threshold. In the **Compression Law** graph, this is shown by a curve in the gradient around the threshold.

The **Knee** control affects both the main threshold point and the **Max GR** point (see below) in equal measure.


---

**Operational tip.** A hard knee allows for greater precision, but can sound more obvious. A soft knee generally provides a more transparent result.

---


#### Max GR

The **Max GR** (Maximum Gain Reduction) allows you to set a limit on how much gain reduction can be introduced, replicating the performance of older optical compressors (as shown in the upper diagram above). With a Max GR of 20dB, for example, any signals that would normally be reduced by more than 20dB will only be attenuated by 20dB. By only compressing the middle of the dynamic range you can exert some general dynamic control whilst still preserving the transients for impact.

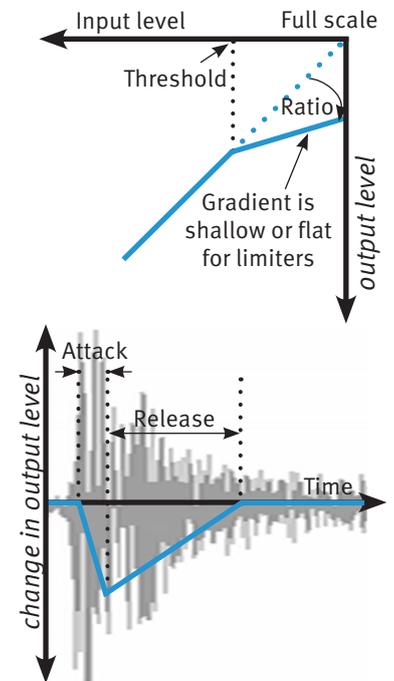

## Bleed

The Bleed controls, located at the bottom of the X-Comp plug-in window, allow you to remove the compressor's effect from high and low frequencies. Frequencies outside the mid-band bypass the compressor and are recombined with the compressed signal at the output. Note that the bypassed signal is not affected by the **Make up** gain.

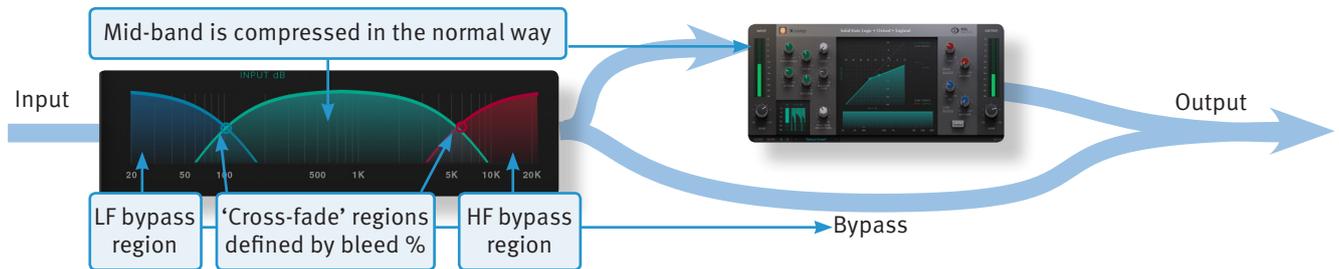

The frequencies and slope of the bleed-band filters are indicated either side of the graph; LF to the left and HF to the right. The slope is measured as a percentage.

The bleed bands can be adjusted by clicking on the values in the displays and dragging up and right in the usual way. Alternatively, they can be adjusted directly using the nodes in the display – brown for low frequencies and blue for high frequencies. Move the nodes horizontally to control frequency and vertically to control percentage

## Auditioning Bleed Bands

To listen to the bleed bands on their own, press the **Listen** button, located below the **Make up** gain. This mutes the compressed signal, so only the bypass portion of the signal is heard.

## COMPRESSOR VALUES

The table below lists the ranges of all of X-Comp's parameters:

Parameter	Min	Max
Input gain	-36dB	+12dB
Threshold	-48dB	+12dB
Ratio	1:1	50:1
Knee	0dB	40dB
Max GR	20dB	60dB
Attack time	0.5ms	100ms
Release time	1ms	2000ms
Make up gain	-6dB	+36dB
LF Bleed	30Hz	300Hz
HF Bleed	2kHz	12kHz
Bleed slopes	0%	100%
Output gain	-36dB	+12dB

## Input and Output Sections

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

**Peak Meter**  
Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.



**RMS Meter**  
The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.





Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## Compression Law Graph

The display in the centre of the plug-in window compares the input and output signals given the current compressor settings. The thicker line indicates the relationship between input and output across the range of levels, while the faint line indicates a 1:1 relationship. In the example to the right, an input level of  $-21\text{dB}$  results in an output level of  $-21\text{dB}$  (as this is below the threshold, this indicates a Make-up gain of  $0\text{dB}$ ), while an input level of  $+6\text{dB}$  results in an output level of  $-7\text{dB}$ .

Threshold and Ratio can be defined by moving the nodes within the display.

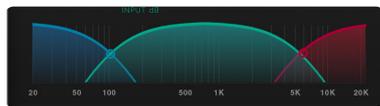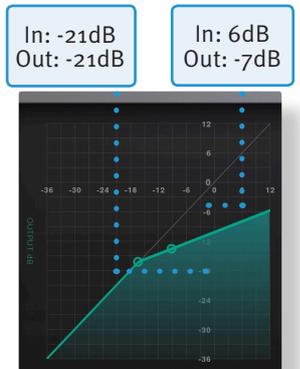

## Bleed Graph


The bleed graph indicates the frequencies that are bypassing the compressor, as described on the previous page.

## I/O Difference Graph

The **I/O Difference** meter to the right of the **Compression Law** graph shows how often each level occurs within the input and output signals. The input is shown on the left and the output on the right.

The vertical scale is amplitude, with  $0\text{dB}$  at the top and  $-\infty$  at the bottom. The length of each line protruding from the centre represents the number of incidents of that amplitude over a period of seconds.

In the graphic to the right, the input signal displays a mixture of very loud and very quiet, indicating that the signal has a large dynamic range that is changing very quickly. The output signal indicates that this dynamic range has been made smaller, with the loud bars being reduced in level and the quiet bars being increased.

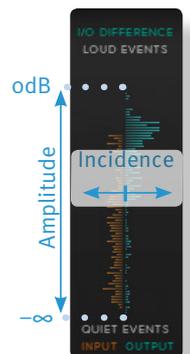

## GR History

The **GR History** (Gain Reduction History) meter shows the current gain reduction and how it has fluctuating.

The thicker line towards the left of the display shows how much gain reduction is currently being used, while the thinner lines to its right show how this has been changing over the past second.




## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/XComp

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\XComp

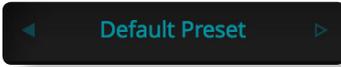

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

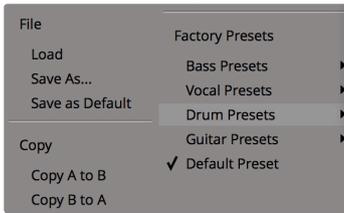

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

# 5. X-EQ

## INTRODUCTION

X-EQ is a 10-band highly configurable EQ plug-in. The six central bands have bell curves, the second and ninth bands are shelf bands, while the first and last bands are filters. The illustration below introduces some of the X-EQ plug-in features which are described in full over the following pages.

Above the main plug-in window is a set of controls that are specific to your host application. Please refer to your host application's user guide for guidelines on using these controls

Internal bypass for smooth in/out comparisons

Interactive EQ display with draggable nodes

Input level metering and control

Switch between main and alternative plug-in settings


Switches between Serial and Parallel signal-flow

Activates bands and assigns them to Edit area

Edit area for the band selected below the main graph

Displays graph of frequency content

Output level metering and control

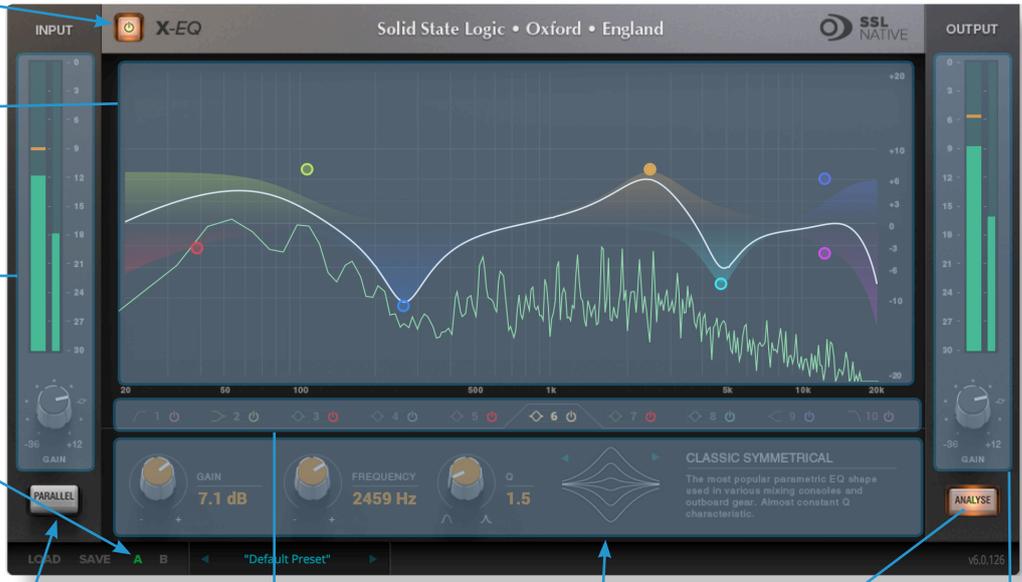


The screenshot shows the SSL X-EQ plugin interface. At the top, there's a header with 'Solid State Logic • Oxford • England' and 'SSL NATIVE'. The main area is a frequency response graph with a white line showing the current EQ settings and a green line showing the input signal. Below the graph are ten band controls, each with a gain knob, frequency knob, and Q knob. The current band is set to 7.1 dB gain, 2459 Hz frequency, and 1.5 Q. A 'CLASSIC SYMMETRICAL' filter shape is shown. On the left and right sides, there are input and output level meters and gain controls. A 'PARALLEL' button is at the bottom left, and an 'ANALYSE' button is at the bottom right. Callout boxes point to various features: 'Internal bypass for smooth in/out comparisons' points to the bypass button; 'Interactive EQ display with draggable nodes' points to the graph; 'Input level metering and control' points to the input meter; 'Switch between main and alternative plug-in settings' points to the 'PARALLEL' button; 'Switches between Serial and Parallel signal-flow' points to the 'PARALLEL' button; 'Activates bands and assigns them to Edit area' points to the band controls; 'Edit area for the band selected below the main graph' points to the band control area; 'Displays graph of frequency content' points to the 'ANALYSE' button; and 'Output level metering and control' points to the output meter.

## INTERFACE OVERVIEW

### EQ Graph Display

The EQ graph provides visual feedback for a number of things:

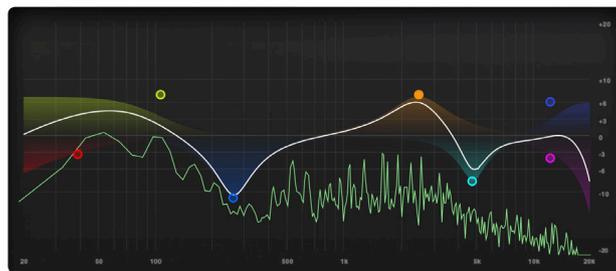

The white line across the graph shows the frequency response of the current EQ settings.

The nodes represent the settings of each individual band, and can be dragged to change the settings:

- For the eight central EQ bands, move the nodes left and right to control Frequency, or up and down to control Gain.
- For the filter bands (Bands 1 and 10), move the nodes left and right to control Frequency or up / down to control Slope.

Each band is colour coded, with the graph node colour matching the coloured dots in their band box below the graph. Each coloured shade area represents the impact of the node with that colour.


The real-time refluency content of the processed signal can be displayed by clicking the **Analyse** button.

## Input and Output Sections

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

### Peak Meter

Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.

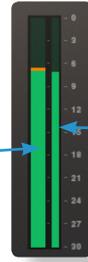

### RMS Meter

The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.



Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## Interface Techniques

The basic interface techniques for the X-EQ are largely identical to those for the Channel Strip. In addition to these basic techniques, the following are also available:

To control **Input** and **Output** levels, click and drag upwards or downwards.

To enter a precise value for any parameter, double-click on its value display, enter a value on your computer keyboard and press the Return key.

Band 'on'



To switch each band on, click on the switch at the top of each band box.

The edit controls to the right of the EQ graph control one of the 10 EQ bands. The band being controlled is selected by clicking on the appropriate band box, located in a row underneath the graph, or by clicking on the band's node in the EQ graph.

The band assigned to the edit controls is indicated by the band box being 'lit' with its band colour, and by the band number and colour appearing at the top of the edit controls for band 6.

## Automation

Every plug-in parameter can be automated in host applications that support automation. The method for recording and editing automation varies from host to host. For specific instructions on using automation within the host, consult the host application's documentation.

## EQ CONFIGURATION

When one of the band boxes below the EQ graph is selected, it's band is assigned to the band editing controls to the right of the graph.

- **Freq** (frequency) control is provided for each band.
- **Gain** and **Q** control is provided for all bands apart from the filter bands (Band 1 and 10).
- The filter bands have slope control in place of the Q control.
- In addition, you can select from a number of filter shape types by clicking on the text box above the gain control and selecting a shape from the drop-down list that appears. These shape types are described on page 34 and following. Note that there are no shape types available for the shelving bands (Bands 2 and 9).



## Plug-in Bypass

The **In/Out** switch located above the **Input** section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding the latency issues associated with the host application's Bypass function.


The button must be 'lit' for the compressor to be in circuit.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/XEQ

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\XEQ

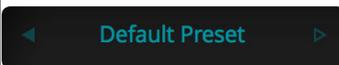

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

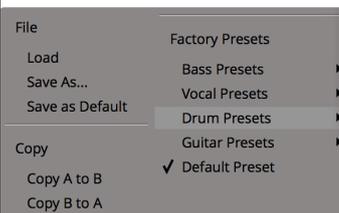

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.


## Analyse

If the **Analyse** button is pressed, a display of the input signal's frequency response is shown within the EQ graph.

This allows problem frequencies to be pinpointed visually and filtered out by moving the nodes within the graph. As the analyser is placed post-EQ, you can see what effect the processing has on the frequency spectrum.

## Parallel

The parallel button changes the order in which the six central bell-shaped bands are processed. In normal (serial) mode, they are processed one after the other. In parallel mode, once the signal has passed through the LF filter and shelf bands, it is split off and routed through each bell band simultaneously, before being combined again for the HF shelf and filter bands:

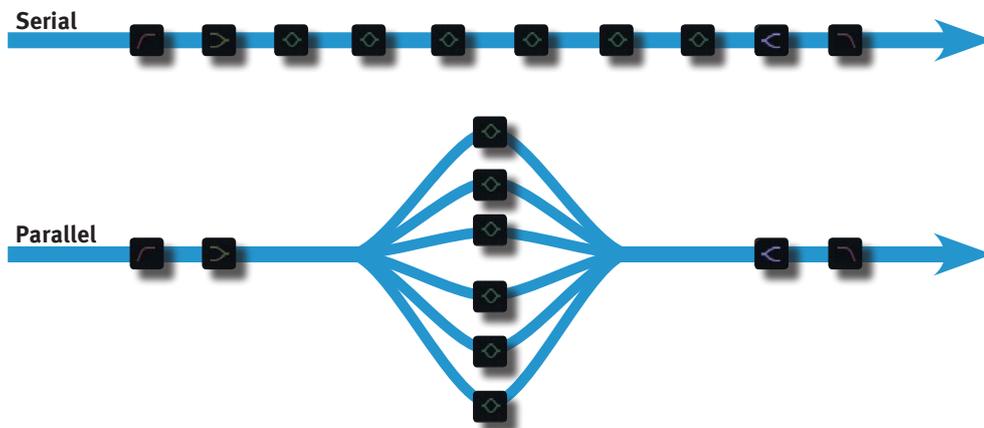

The parallel EQ is modelled on the old 'Parallel Passive' EQ units, and the different style of band interaction means that the EQ performs quite differently. See the EQ History section on page 36 for more information.

## EQ PARAMETER VALUES

Band	Gain	Frequency	Q
HP Filter	n/a	20Hz – 1020Hz	0 – 48dB/oct in 6dB steps
Low Shelf	±20dB	20Hz – 1020Hz	0.3 – 10.3
Midband 1	±20dB	20Hz – 20kHz	0.3 – 10.3
Midband 2	±20dB	20Hz – 20kHz	0.3 – 10.3
Midband 3	±20dB	20Hz – 20kHz	0.3 – 10.3
Midband 4	±20dB	20Hz – 20kHz	0.3 – 10.3
Midband 5	±20dB	20Hz – 20kHz	0.3 – 10.3
Midband 6	±20dB	20Hz – 20kHz	0.3 – 10.3
High Shelf	±20dB	500Hz – 20kHz	0.3 – 10.3
LP Filter	n/a	500Hz – 20kHz	0 – 48dB/oct in 6dB steps


## EQ AND FILTER SHAPES

### Bell Shapes

#### Q Definitions:

- P – 3dB** Classical definition where Q is measured 3dB below peak for boost or 3dB above peak for cut.
- o – 3dB** Definition used for bells in some US products, the bandwidth for Q calculation is measured 3dB below odB line for cut or 3dB above for boost. Q in both definitions correct only for +6dB boost/cut.
- P/2** New ‘musical’ definition based on the bandwidth measurement in the middle of a bell filter, between peak and odB line.


**Normalisation** 12 equalisers are normalised to have exactly the same bell shape for +6dB boost.

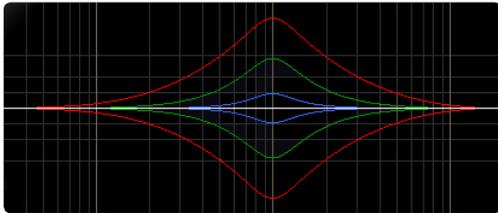

#### Classic Symmetrical (Classic Sym)

The most popular parametric EQ shape used in various mixing consoles and outboard gear. Almost constant Q characteristic.

P – 3dB

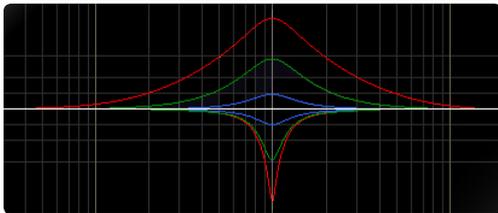


#### Classic Asymmetrical (Classic Asym)

Often features in older equalisers. Boost as above but much narrower cut characteristic.


P – 3dB boost

o – 3dB (x2) cut

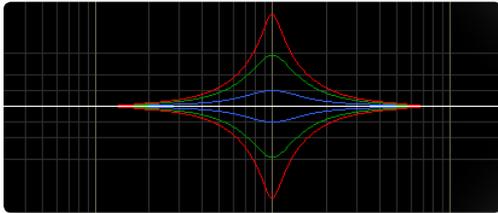

#### Proportional 1 (Prop 1)


Proportional equalisers are recognised as being more ‘musical’ than Constant Q. The bells are wider below +6dB and narrower above +6dB (or –6dB for cut).

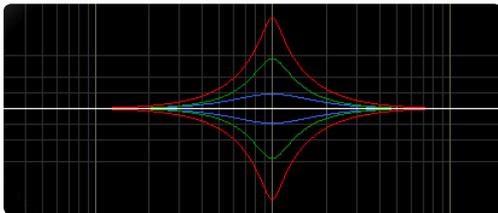

#### Proportional 2 (Prop 2)

Like Proportional 1 but with larger changes below and above +6dB peak (or –6dB for cut).


P – 3dB

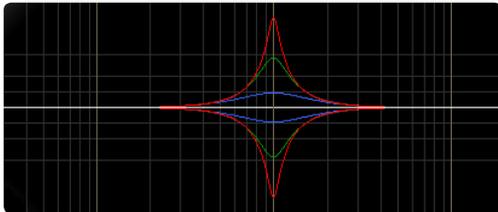

#### Proportional 3 (Prop 3)

Like Proportional 1 but with extra widened bells between 0 and +3dB (or –3dB for cut).


P – 3dB

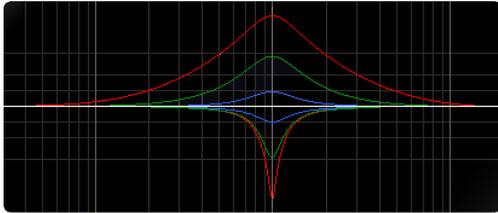

#### Constant Q Asymmetrical (CQ Asym)


Used in some US products and mixers. The boost characteristics are defined according to o – 3dB formula. Extra widened between –3dB and odB.

P – 3dB boost, o – 3dB cut

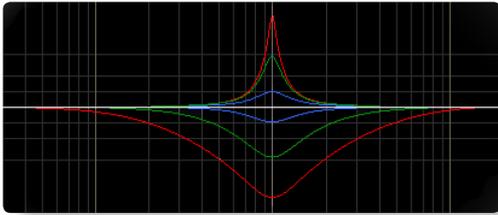

### Constant Q Asymmetrical Reverse (CQ Asym R)


Exactly like above but with mirrored boost and cut characteristics.

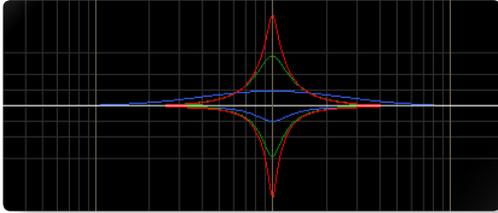

### Constant Q Invert (CQ Invert)

Both boost and cut characteristics are both defined according to 0 – 3dB formula.


0 – 3dB

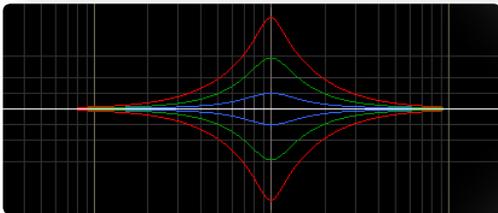

### Constant Q New (CQ New)

Defined Q is always perfectly maintained independent of bell gain (also below 6dB). In terms of P – 3dB definition of this equaliser can be classified as proportional.

P/2

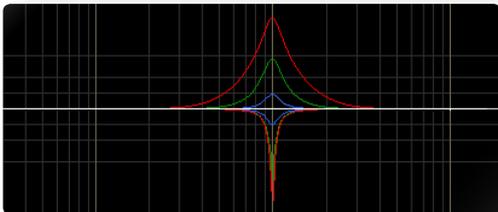

### Parallel

Note this is accessed via the Parallel switch, not the drop-down menu.

Recreates the passive LC parallel equaliser with all its advantages (sound) and disadvantages (band interaction, asymmetry). As found in graphic equalisers.

3dB boost, 0 – 3dB (x2) cut

## Shelving Bands



### Low and High shelves

Q value is used to control overshoot characteristic. On the left is the Low shelf filter with a low Q value, on the right the High shelf filter exhibits overshoot with a large Q value.

Note that there are no alternative shapes for shelving bands

## Filter Shapes




### Critical

‘Critical Damped’ filters simulate a chain of passive analogue RC (for highcut) and CR (for low-cut) stages fixing a behaviour similar to a series of RC elements in vintage analogue equipment.




### Bessel

Linear phase behaviour leads to no overshoot or ringing resulting from a sudden transition between signal levels. The drawback is a sluggish roll-off rate.

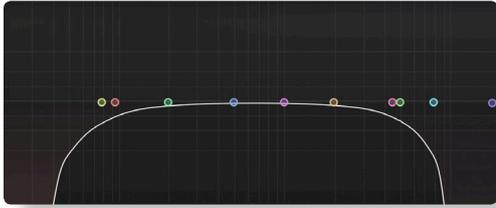


### Gaussian

No ringing or overshoot in the time domain, but slow roll-off in the frequency domain.

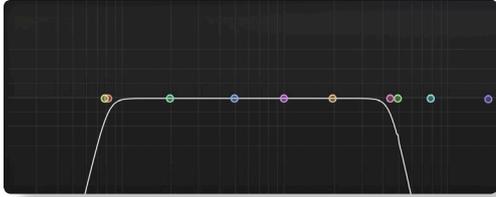

### Butterworth

Characterised by having a maximally flat magnitude response, ie. no amplitude ripple in the passband.

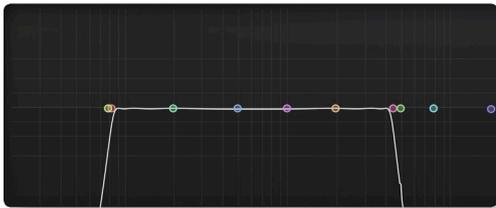

### Chebyshev

Characterised by having an equiripple magnitude response, meaning the magnitude increases and decreases regularly from DC to the cutoff frequency.

## EQ HISTORY

### An Audio Engineer's Best Friend

The equaliser is the oldest and the most popular sound processing tool. From the earliest days, its main function has been to correct or enhance sound by cutting or boosting certain frequency ranges. Engineers have developed countless equalisers for over 50 years, some of which became legendary and were considered bench mark equipment in studios. The most popular type of EQ in recording and post-production studios is the parametric equaliser or PEQ. It offers maximal flexibility due to direct access to all relevant filter parameters. Properly used, the PEQ is a very powerful tool and the best friend of every sound engineer in the battle for perfect sound. If misused, it can be the greatest enemy of any recording.

### The Best of the Analogue and Digital Worlds

X-EQ is a creative equalising tool combining the best of both the analogue and digital worlds. We recreated the most legendary analogue equalisers and added a few experimental characteristics only possible in the digital domain. By using proprietary filter algorithms, we have achieved a huge dynamic range as well as extremely low noise and distortion levels; and thus an unparalleled sound purity impossible with any analogue circuitry.

### Analogue Parametric EQ Modelling

In today's era of digital audio workstations, hundreds of software parametric equalisers are available. Many of them are intended to be "THE best sounding equaliser ever". The truth is that only a few of them are recognised and adored by the experts. You may ask why one equaliser sounds great while another does not. This question is almost as old as the equaliser itself and still is not completely answered. On the one hand there are some obvious rules that must be followed when designing a good sounding PEQ, on the other hand there are some never really proven esoteric claims driven by marketing departments or self-nominated audio evangelists. Especially treasured analogue equalisers are considered by some people as being absolutely unique and unmatched by any 'dirty' digital equaliser. The truth is that with a properly designed, fully parametric analytic EQ every amplitude and phase characteristic of any other equaliser setup can be recreated. Of course, the contribution of distortions to the specific sound of a particular analogue equaliser caused by the respective electronics has to be considered. If the distortions are 'good', they may make certain applications sound better. Usually however, 'bad' non linear distortions and other deficiencies like limited dynamic range are surely not responsible for a 'magic' sound. Therefore, our policy in digital PEQ design has always been to make the equaliser filters as precise and clean as possible. For controlled generation of distortion we recommend using enhancers or other specialised processors with proper built-in anti-aliasing technology.

## Non Linear-phase EQ

Phase shift in equipment is probably one of the most misunderstood topics in audio. Phase shifts often get blamed for anything that is not classed as typical distortion. The reality is that all analogue EQs produce a deviation from linear phase that is specifically related to the shape of the EQ curve, and it is precisely these phase changes that produce the required adjustments. This is a very natural process which can be found in the audio characteristics of rooms, materials and elsewhere.

Though it is not possible for us to detect phase in isolation, the phase shift of an EQ can often be the cause of the 'magical' sound of that device once the EQ signal is added back into the mix. For example, the SSL Native channel EQ derived from the SSL analogue consoles = plenty of phase shift and plenty of magic!

In contrast, a linear-phase EQ delays all frequencies by the same amount. This can only be achieved in the digital domain by using special techniques. While this process is very effective in certain situations (eg. 'surgically' removing troublesome frequencies), it should not be considered as a superior tool for the majority of EQ tasks.

Linear-phase equalisers have become popular over the past few years due to the proliferation of powerful digital processors. We decided not to go down that route with X-EQ and we think you'll agree with that decision. Maybe linear-phase EQ is something we will explore in the future, but... who knows? An equaliser not only changes the relative frequency balance of a signal but also its phase. If you EQ a sound until it sounds right or natural, then the chances are that you are EQing to make it sound in phase with the rest of the mix. We need say no more on this subject.

## Parallel Passive EQ

Parallel EQ exhibits quite different sonic properties to the familiar serial parametric EQ. We are generally used to hearing the effect of one EQ band superimposed on another, as opposed to the band interaction inherent to a parallel EQ. Because the bands are placed in a parallel configuration, phase cancellations and re-enforcements happen that are not always obvious when first encountered.

Passive EQ is something that is found in old equaliser units and is generally known for its transparent and natural sound, but has some problems associated with it. However, in the digital domain these shortcomings do not have such an influence.

A passive EQ does not have any gain elements, but can still have controls to seemingly boost frequencies as well as cut. What actually happens is that the entire signal is cut by an amount, but the frequencies that are apparently 'boosted' are simply not cut as much. Therefore the unit must attenuate either the input, the output, or both to allow enough headroom.

Unfortunately, in the analogue domain, a 20dB reduction in signal level produces a 20dB increase in the noise floor. Luckily in the digital domain, with a 64-bit floating point DSP, these issues do not remain.

In X-EQ – when the 'parallel' button is engaged – you are presented with a parallel passive EQ model that the original designers of these devices could only have dreamed of. The noise floor can be disregarded due to the huge resolution available in SSL Native plug-ins.

You may find yourself entering this mode more and more as you become familiar with the sonic signature. Larger gain changes are possible without colouration, and boost starts to become something that is useable to a significant degree in a digital EQ!


Parallel EQ does exhibit asymmetry in its boost and cut characteristics. But this is not such a bad thing as most engineers would agree that boost is best done with low (wide) Q values and cut with a higher (narrower) Q.

## 6. Vocalstrip

### INTRODUCTION

Vocalstrip is a one-stop solution for superior vocal processing, providing tailor-made tools for fixing and polishing your vocal sound. The illustration below introduces the main Vocalstrip plug-in features which are described in full over the following pages.

Above the main plug-in window is a set of controls that are specific to your host application. Please refer to your host application's user guide for guidelines on using these controls

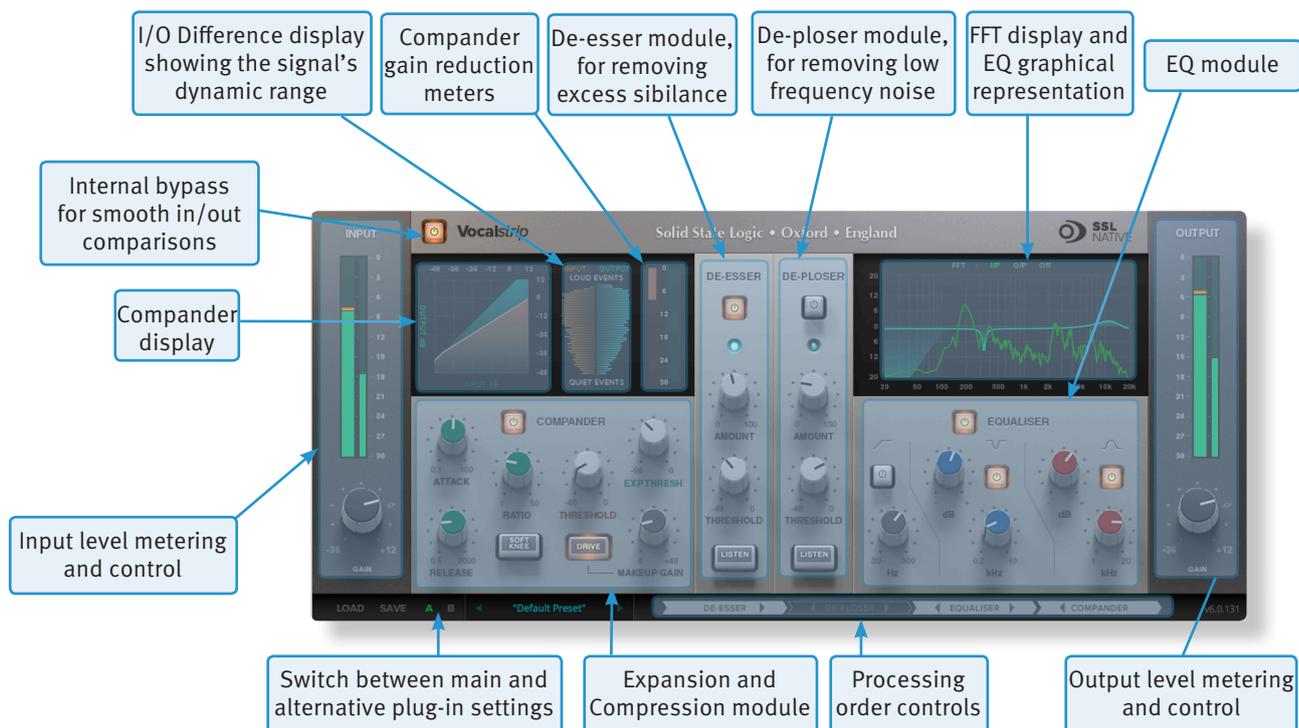


### INTERFACE OVERVIEW

The basic interface techniques for the Vocalstrip are largely identical to those for the Channel Strip.

#### Plug-in Bypass

The **Power** switch located above the **Input** section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding the latency issues associated with the host application's Bypass function.

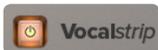


The button must be 'lit' for the compressor to be in circuit (as shown left).

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/Vocalstrip

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\Vocalstrip

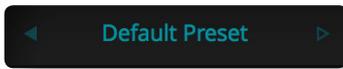

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

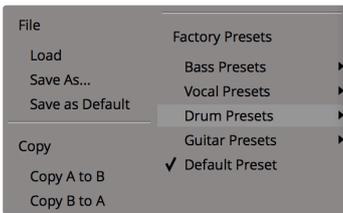

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.


## Automation

Automation support for Vocalstrip is the same as for the Channel Strip.

## INPUT AND OUTPUT SECTIONS

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

**Peak Meter**  
Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.

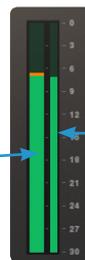

**RMS Meter**  
The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.



Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## VOCALSTRIP MODULES

### De-esser

Sibilance is a resonance often found in vocal recordings which can result in 'S' consonants becoming too pronounced. The Vocalstrip De-esser can detect and remove sibilance.

Switch the De-esser on by clicking on the power button in its top left-hand corner. The blue indicator between the controls 'glows' to show that it is working.

- Move the **Amount** knob to control how much sibilance is removed.
- Move the **Threshold** control to set the detection level, so that the De-esser can distinguish between 'S' and 'non-S' sounds.

To listen only to the sibilance that is being removed, press the **Listen** button. This can be particularly helpful in ensuring that the threshold is correctly set.



### De-ploser

Plosives are bursts of low frequency energy in a signal that can cause compressors to sound unpleasant. They are most often caused by the breath of a singer standing too close to the microphone. The Vocalstrip De-ploser detects these artefacts and lets you manage their level. The De-ploser's controls are very similar to those of the De-esser:

Switch the De-ploser on by clicking on the power button in its top left-hand corner. The blue indicator between the controls 'glows' to show that it is working.

- Move the **Amount** knob to control how much plosive is removed.
- Move the **Threshold** control to set the detection level, so that the De-ploser can distinguish between plosives and normal low frequency sounds.

To listen only to what is being removed, press the **Listen** button. This can be particularly helpful in ensuring that the threshold is correctly set.



### Equaliser

Switch the EQ on by clicking on the power button in its top left-hand corner. Three popular EQ types are provided to allow you to cut low frequencies, find and attenuate resonances and shape the top end of the signal. Switch each band on by clicking on the oblong switch above the band's curve graphic.

The low cut filter operates in the range of 30Hz to 300Hz, with a slight boost around its cut-off frequency.



The notch filter operates in the range 200Hz to 10kHz and offers 12dB of boost and 36dB of attenuation with a high Q value.


The high band EQ offers 12dB of boost/attenuation over the range of 1kHz to 20kHz with a low Q value.



## EQ Display

When any controls within the EQ section are moved, the display in the top right-hand quarter of the window becomes an EQ graph:

- The line across the graph shows the frequency response of the current EQ settings.
- The shaded area represents the impact of each of the three EQ bands.
- A display of the signal's frequency response is shown in green. The FFT signal displayed can be switched between the plug-in input and output and can be switched off, all using the **FFT** buttons above the graph.

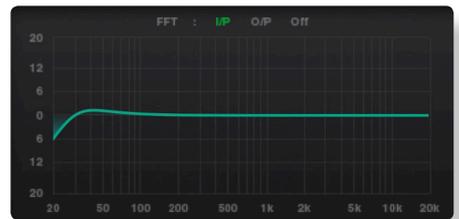

## EQ Tip: Finding and Attenuating a Resonance

A vocal recording may contain a resonant frequency caused by a number of factors, including bad mic placement, room modes, or even unpleasant resonances caused by the singer's skull!

These can be detected and reduced in the following way:

- Switch off the low cut filter and high band EQ
- Set the notch filter gain to between about +10dB
- Sweep the frequency slowly up range, listening out for ringing
- Once you have found the offending frequency, bring the gain down to a significant negative value

Another technique is to use the green frequency response line in the EQ graph and locate resonances visually.

## Compander


The Vocalstrip Compander is a hybrid Compressor and Expander. Switch it on by clicking on the power button.

### Expander

First the signal enters a fixed ratio downwards expander, designed to reduce room ambience, spill or breath noise that is often brought up by the subsequent compression.

To set the level at which the level reduction is introduced, turn the **Exp Thresh** (Expander Threshold). Turn the threshold to minimum to turn the expander off. The amount of level reduction introduced is shown in the green bar above the **Exp Thresh** knob.



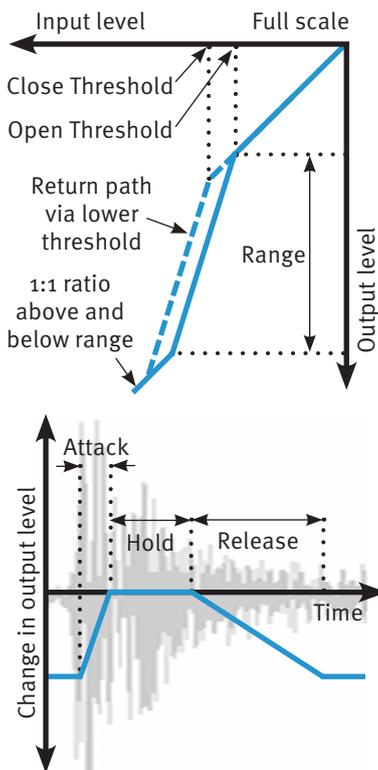

### Compressor

The compressor offers fully variable **Ratio**, **Thresh** (threshold), **Attack**, **Release** and **Makeup** controls, along with a choice of **Hard** or **Soft Knee**.

The output stage, which is sourced after the make-up gain, features an optional **Drive** feature that introduces harmonic characteristics to the signal. Its intensity is increased with the **Makeup** gain. If you use a lot of make-up gain to drive the circuit, the level can be reduced again using the Output level control. The amount of level reduction introduced is shown in the red bar above the compressor controls.

Parameter	Min	Max
Ex Thr	-96dB	0dB
Ex Ratio	Fixed: 1.5:1	
Comp Thr	-48dB	0dB
Comp Ratio	1:1	50:1
Attack	0.1ms	100ms
Release	0.5ms	2s
Makeup	0dB	48dB

### Compander Display

When any controls within the Compander section are moved, the display in the top of the window shows two different graphs:

The left-hand graph is a gain-law display, showing the relationship between input and output levels, as illustrated in the graph above-left.

The right-hand graph is an I/O difference display, showing how often each level occurs within the input and output signals. The input is shown on the left and the output on the right.

The vertical scale is amplitude, with 0dB at the top and  $-\infty$  at the bottom. The length of each line protruding from the centre represents the number of incidents of that amplitude over a

period of seconds.



### Processing Order

The processing order is controlled at the base of the plug-in window.

Click on the left or right arrows to move a module earlier or later in the plug-in signal path.



# 7. Drumstrip

## INTRODUCTION

Drumstrip is a one-stop solution for superior drum processing, providing tailor-made tools for fixing and polishing your drum sounds. The illustration below introduces its features which are described in full over the following pages.


The image shows the Drumstrip software interface with several callout boxes pointing to specific features:

- Above the main plug-in window is a set of controls that are specific to your host application. Please refer to your host application's user guide for guidelines on using these controls** (points to the top of the interface)
- Gate activity metering section** (points to the GATE activity meter)
- Gate for removing spill** (points to the GATE section)
- Transient Shaper for increasing/reducing transient attack** (points to the TRANSIENT SHAPER section)
- Internal bypass for smooth in/out comparisons** (points to the power switch above the input section)
- Input level metering and control** (points to the INPUT level meter and gain control)
- HF and LF Enhancers, for enriching high and low frequencies** (points to the LOW FREQ ENHANCER and HIGH FREQ ENHANCER sections)
- Processing order controls** (points to the bottom navigation bar)
- Compressor with Listen Mic characteristics** (points to the LISTEN MIC COMPRESSOR section)
- Output metering and control** (points to the OUTPUT level meter and gain control)

## INTERFACE OVERVIEW

The basic interface techniques for the Drumstrip are largely identical to those for the Channel Strip.

### Plug-in Bypass

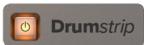

The **power** switch located above the **Input** section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding the latency issues associated with the host application's Bypass function. The button must be 'lit' for the compressor to be in circuit.

### Automation


Automation support for Drumstrip is the same as for the Channel Strip.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/Drumstrip

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\Drumstrip

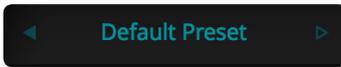

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

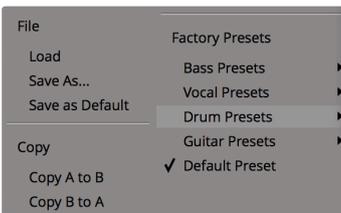

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.


**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

## Automation

Automation support for Vocalstrip is the same as for the Channel Strip.

## INPUT AND OUTPUT SECTIONS

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

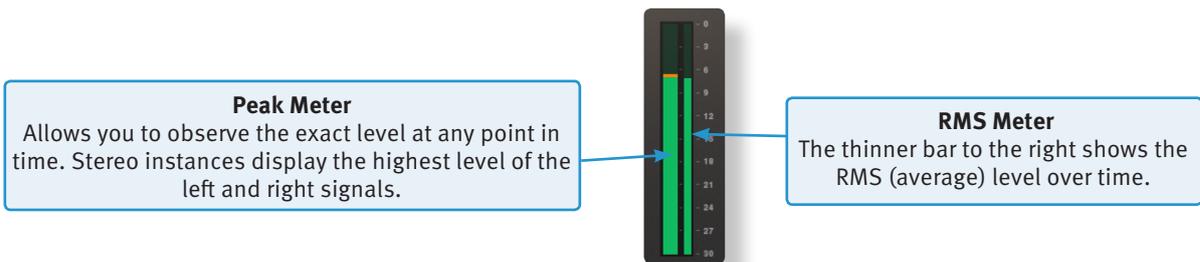

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.



Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## DRUMSTRIP MODULES

### Gate

The gate is suitable for many applications, including:

- Shortening drum hits to obtain a ‘tighter’ sound
- Controlling ambience on live drums tracks
- Manipulating attack and decay characteristics

Switch the Gate on by clicking on the power button.

The Gate provides controls for the **Attack**, **Release** and **Hold** times, as well as **Open** and **Close** thresholds and **Range** levels, as illustrated in the diagrams below left. If you are unclear about these parameters.




Attenuation level

Input level

Green line: ‘Open’ threshold

Orange line: ‘Close’ threshold

Range value

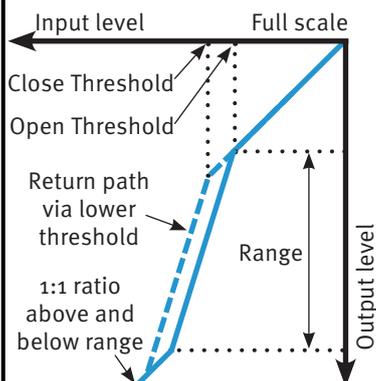


### Open and Close Thresholds

The levels for ‘opening’ the gate to audio and ‘closing’ it again are set separately. Generally, the ‘open’ level is set higher than the ‘close’ level. This is known as hysteresis and is very useful as it allows instruments to decay more naturally. If the close threshold is higher than the open threshold, the close threshold is ignored.

### Range

The range is the depth of attenuation applied to the signal when the gate is closed, as indicated by the white line in the right hand column. For a true gating action the range should be set to  $-80\text{dB}$ , which is effectively silence. By reducing the range, the gate takes on some of the characteristics of a downward expander where the signal is lowered in level set by the range amount, rather than being completely silenced. This can be useful in cleaning up a drum track containing reverb, where silencing the reverb would sound too artificial but attenuating it by a few dB would push it down to an acceptable level.

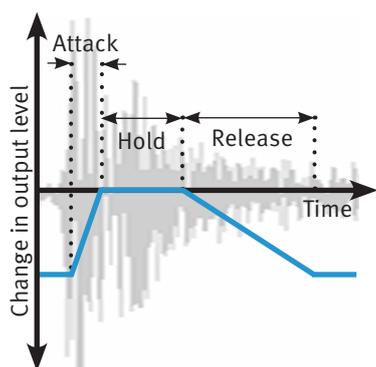


Parameter	Min	Max
Open Thr	0dB	$-30\text{dB}$
Close Thr	0dB	$-30\text{dB}$
Range	0dB	$-80\text{dB}$
Attack	0ms	0.1ms
Hold	0s	4s
Release	0s	1s

### Transient Shaper

The Transient Shaper allows you to add attack to the start of a drum hit by increasing the amplitude of the attack portion of the signal whilst leaving the decay unchanged. The right hand waveform is a processed version of the one on the left. It has been passed through the transient shaper where the amplitude of the attack portion has been increased.



Switch the Shaper on by clicking on the ‘power’ button. The meter gives visual feedback on how much attack is being added using the **Gain** and **Amount** controls. **Gain** controls the detection level of the controller signal, and should be set so that only the transients you want to shape are detected. If this is set too low then the Shaper will do nothing; if it is set too high then the Shaper will detect too many transients, resulting in an exaggerated process, and the attack appearing too long. The default setting of 0dB should be a good starting point.

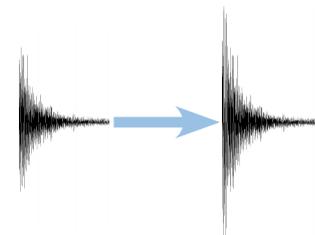


---

**Gain** doesn't directly affect the output signal's gain.

---


**Amount** controls the amount of the processed signal added to the unprocessed signal. This process can increase the peak level of a signal significantly, so watch the output meter carefully.

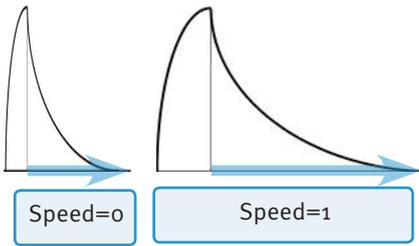

**Speed** controls the length of time the added attack takes to fall back down to the normal signal level once it has reached the top of the attack phase. Turn the knob clockwise for a slower speed, and longer transient.

The **Invert** switch inverts the processed signal so that it is subtracted from the unprocessed signal. This has the effect of softening the attack, resulting in more body in the drum sound.

The **Listen** switch allows you to listen to the processed signal, to assist in the set up process.

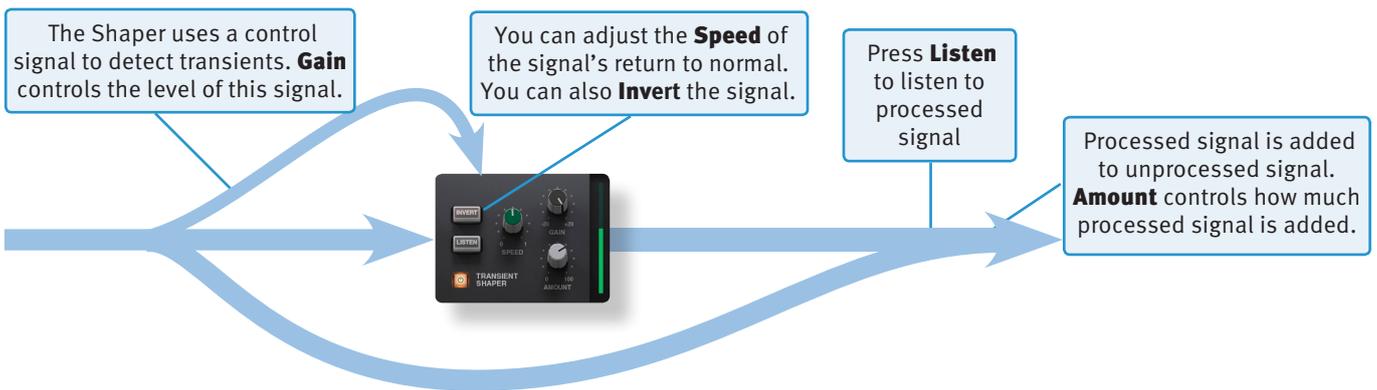

---

When the **Invert** and **Listen** buttons are both pressed, the signal will not be inverted.

---

## HF and LF Enhancers



The HF and LF enhancers respectively enrich the high and low frequencies of the input signal. Whereas a standard EQ simply raises the level of certain frequencies, the Enhancer adds a combination of 2nd and 3rd harmonics to those frequencies, producing a more pleasing effect.

Switch each Enhancer on by clicking on the power button in its top left-hand corner. No effect is heard until an Enhancer's **Drive** and **Amount** are turned up.



**HF Cutoff** sets the frequency above which the HF Enhancer generates harmonics. It ranges from 2kHz up to 20kHz – To add air or sparkle to a signal, push this frequency towards the higher end of the range. To give more presence to a signal, use the lower end of the range. Note that the effect is barely audible in the 15kHz to 20kHz range.

**LF Turnover** sets the frequency below which the LF Enhancer generates harmonics. It ranges from 20Hz up to 250Hz. The LF Enhancer is great for adding depth and weight to kick drums, snare or toms.

Each Enhancer has its own **Drive** and **Amount** controls:

- **Drive** (or overdrive) controls the density and amount of harmonic content, from 0 to 100%.
- **Amount** is the amount of Enhanced signal that is mixed into the unprocessed signal, from 0 to 100%.

## Listen Mic Compressor



The Listen Mic Compressor was first found in the classic SL 4000 E Series console. The Drumstrip edition includes a narrowband EQ bypass and a wet/dry Mix control.

**Comp** controls the amount of compression, from 0 to 100%.

**MakeUp** controls the level compensation for the gain reduction and **Mix** controls the balance of the compressed ('**Wet**') to uncompressed ('**Dry**') signal. Note that **MakeUp** only acts on the 'wet' part of the signal.

To simulate the original narrow-band listen mic characteristic, activate the **EQ In** button – to use the compressor on the full frequency range, leave **EQ In** deactivated.

---

*The Listen Mic Compressor features very quick fixed time constants. This means it is easily capable of producing distortion on low frequency material.*


---

## Processing Order

The five processing blocks in Drumstrip can be configured in any order, as defined by the Process Order blocks at the base of the plug-in window.

To move a module within the order press either the left arrow or the right arrow.


By default the gate is first in the chain so that it is able to act on the full dynamic range of the signal before the signal is processed by the Listen Mic Compressor.

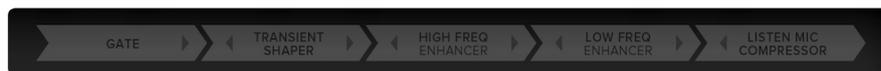

## 8. X-ValveComp

### INTRODUCTION

The illustration below gives an overview of some of the X-ValveComp features which are described in full over the following pages.

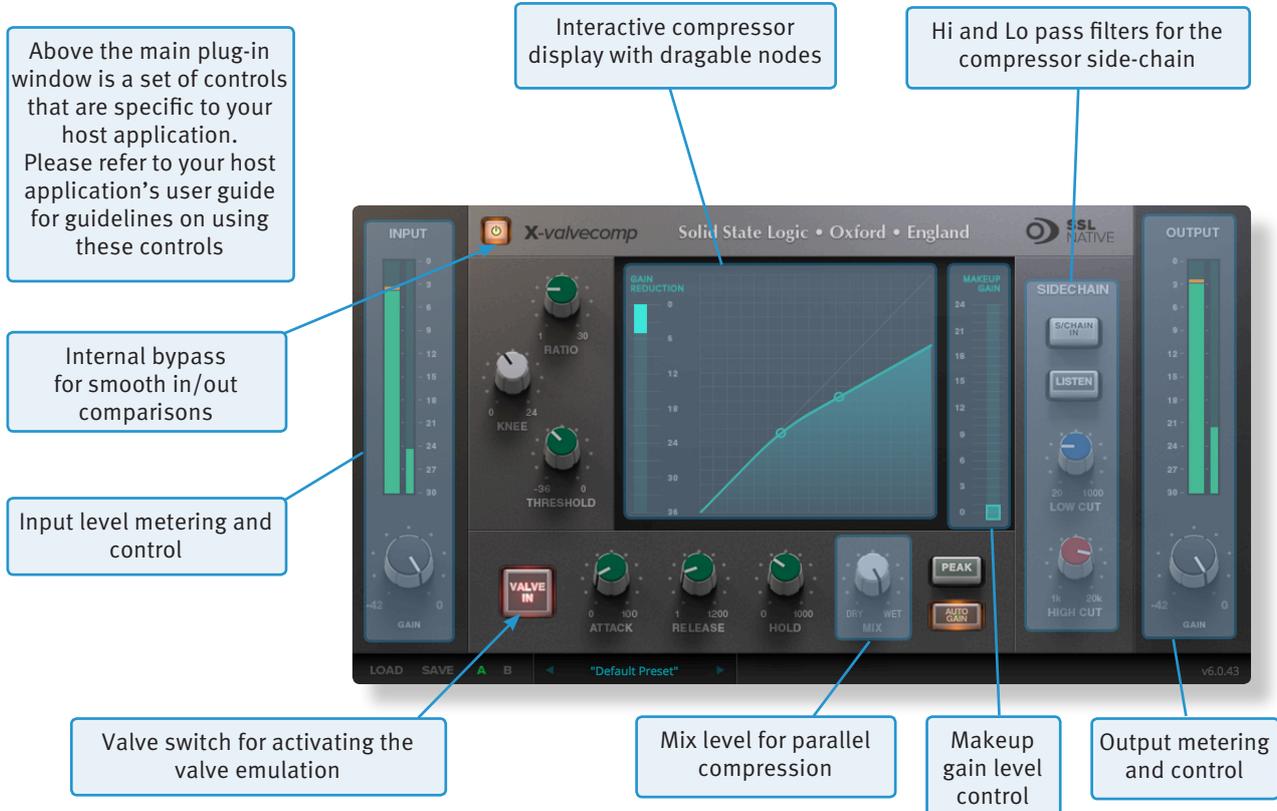

### INTERFACE OVERVIEW

The basic interface techniques for the X-ValveComp are largely identical to those for the Channel Strip. In addition to these basic techniques, the following are also available:

To control **Input** and **Output** levels, click and drag upwards or downwards.

To enter a precise value for any parameter, double-click on its value display, enter a value on your computer keyboard and press the Return key.

**Threshold** and **Ratio** values can also be controlled directly within the Compression Law display. Move the left hand node along its diagonal line to control the Threshold, and move the right hand node up and down to control the ratio.

### Automation

Automation support for X-ValveComp is the same as for the Channel Strip.

## Plug-in Bypass




The **power** switch located above the Input section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding any latency issues associated with the host application's Bypass function. The button must be 'lit' for the compressor to be in circuit.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/XValveComp

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\XValveComp

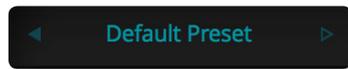

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

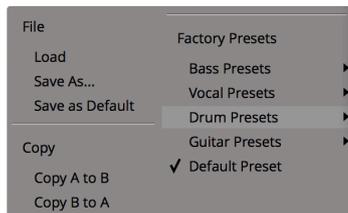

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

## Input and Output Levels

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

**Peak Meter**  
Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.



**RMS Meter**  
The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.



Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## Knee

The Knee controls how focussed the threshold level is:

- With a hard knee (knob at minimum) the compressor's parameters all come into force at precisely the point at which the threshold is crossed. In the Compression Law diagram, this is shown by a sharp change in gradient at the threshold.
- With a soft knee, the ratio is introduced gradually, starting below the threshold and reaching its full value above the threshold. In the Compression Law graph, this is shown by a curve in the gradient around the threshold.
- The Knee control also affects the main threshold point.

## Valve In



Valve In introduces a tube compressor emulation for saturating the signal by adding harmonics.

## Side-chain

Hi- and Lo-pass filters are available for the Compressor side-chain (see right).

To listen to the Compressor or side-chain, click on the **Listen** button.



## Mix



Dry/Wet option for parallel compression.

## Auto Gain




You can allow the plugin to set the make-up gain automatically by clicking the **Auto** button (towards the bottom of the screen).

## 9. X-Saturator

### INTRODUCTION

The illustration below gives an overview of some of the X-Saturator features which are described in full over the following pages.

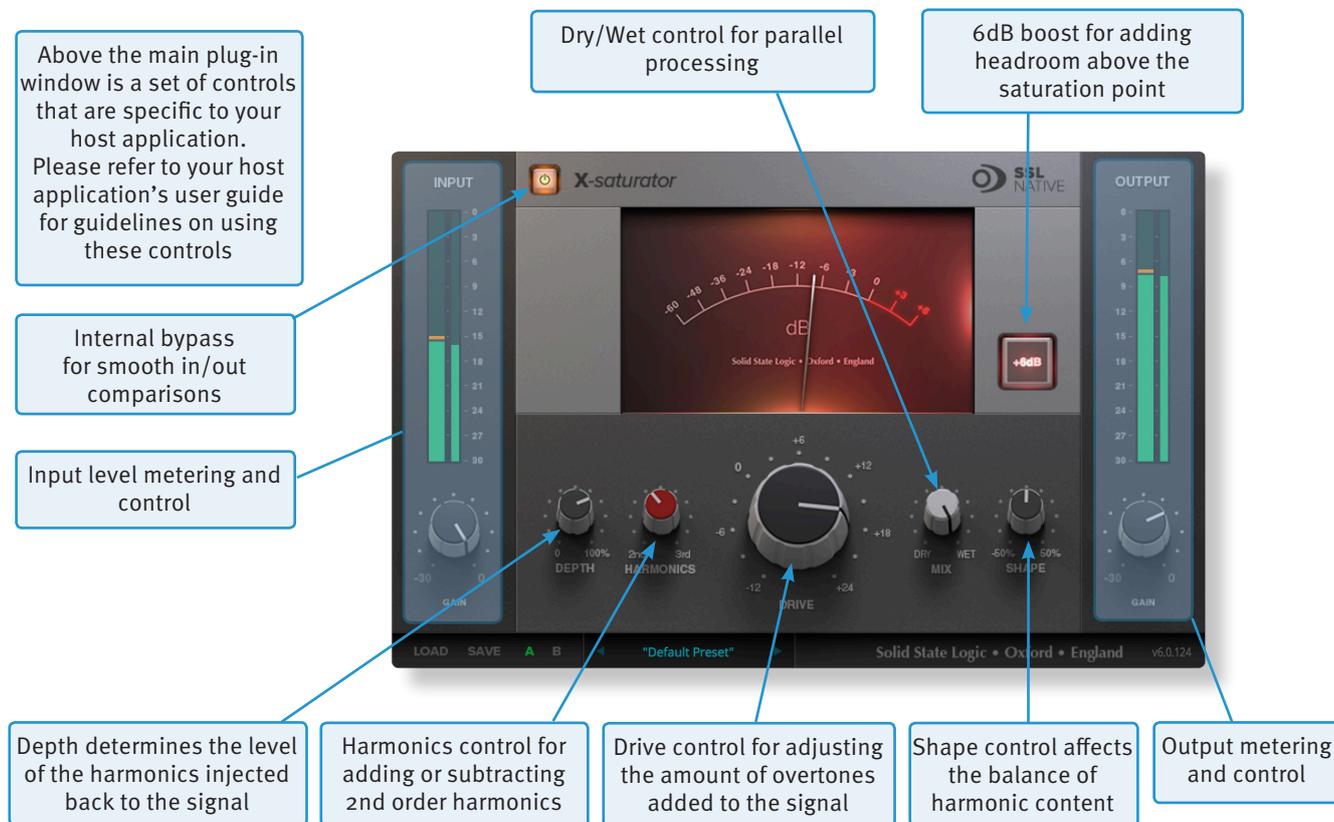

### INTERFACE OVERVIEW

The basic interface techniques for the X-Saturator are largely identical to those for the Channel Strip.

#### Automation

Automation support for X-Saturator is the same as for the Channel Strip.

#### Plug-in Bypass




The **power** switch located above the Input section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding any latency issues associated with the host application's Bypass function. The button must be 'lit' for the saturator to be in circuit (as shown).

## Input and Output Levels

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

### Peak Meter

Allows you to observe the exact level at any point in time. Stereo instances display the highest level of the left and right signals.

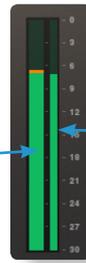

### RMS Meter

The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.



Turn the **GAIN** knob in the input section to control the level of the incoming audio signal. The post-gain signal level is shown above.

Turn the **GAIN** knob in the output section to ensure that the signal retains a good signal level post-processing. The output signal level is shown above the knob.

## Boost +6dB

Will add 6dB of Headroom above your saturation point.

## Drive

Dialing in the drive will determine the level of saturation that will be added.

## Harmonics

By adjusting the Harmonics control the distortion characteristics can be shifted from '50s valve-style overdrive (if the control is turned fully anti-clockwise for 2nd harmonic distortion) to '70s transistor-style grit (if the control is turned fully clockwise for 3rd harmonic distortion).

## Depth / Shape


**Depth** and **Shape** control the number of harmonics injected back into the signal, enriching the sound. **Depth** sets the amplitude of the added harmonics; at 0% no harmonics are introduced to the input signal, at 100% the full amount of generated harmonic content is introduced to the input signal. **Shape** will add overtones in the high frequency spectrum; -50% is subtle and smooth, +50 will sound more aggressive.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/XSaturator

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\XSaturator

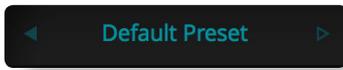

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display

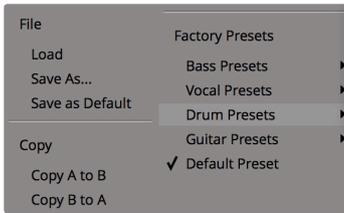

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

# 10. X-Phase

## INTRODUCTION

The illustration below gives an overview of some of the X-Phase features which are described in full over the following pages.

Above the main plug-in window is a set of controls that are specific to your host application. Please refer to your host application's user guide for guidelines on using these controls

Internal bypass for smooth in/out comparisons

Input level metering and control

Delay control for adjusting the delay

Left/Right switch to independently edit the left and right signal (stereo version only)



All-pass filter section

Output metering and control


## INTERFACE OVERVIEW

The basic interface techniques for the X-Phase are largely identical to those for the Channel Strip.

### Automation

Automation support for X-Phase is the same as for the Channel Strip.

### Plug-in Bypass

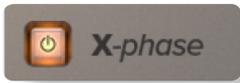


The **power** switch located above the Input section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding any latency issues associated with the host application's Bypass function. The button must be 'lit' for the saturator to be in circuit (as shown).

## Input and Output Levels

The input and output sections at either side of the plug-in window provide input and output gain control, along with displays of the following information:

### Peak Meter

Allows you to observe the exact level at any point in time. There are two meters in stereo and one in mono.

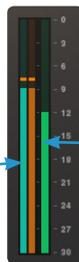


### RMS Meter

The thinner bar to the right shows the RMS (average) level over time.

When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.

## Delay

Activate or deactivate a delay for the whole signal with the **Delay In** switch. Use the dial to set the delay in seconds, milliseconds and samples, meters or feet. The single +/- switches will give you smaller increments than the double +/- switches.

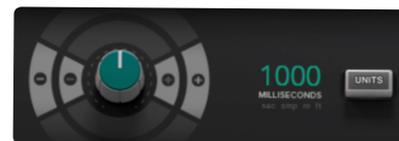

## All-pass In

Activates the All-pass Filter.

## All-pass Phase

Inverts the phase of the All-pass Filter.

## Frequency

Sets the Frequency of the filter.

## Filter

Switches the filter between first and second order.

## Q Factor

Sets the Q of the Filter, thus it will adjust the rate of phase change across the frequency spectrum.



## Stereo Version


Stereo versions have an additional **L-R-Switch** to edit stereo signals.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:

**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/XPhase

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\XPhase

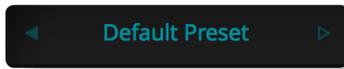

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.

## Preset Management Display



There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons



The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.


## PHASED BY PHASE?

Phase. It's a funny subject, one that many of us think we know a bit about but unfortunately don't often fully understand how to handle all of it. The idea that two microphones, set at different distances from a guitar, will have the sound arrive at them at different times – thus making them “out of phase” with each other – is fairly simple to grasp. To fix this we could delay one of the signals by the same time it takes the sound to travel between the two microphones so that the signal arrives at the Mix bus at the same point in time. We're quite used to the idea of “flipping the phase” of a signal using a mixing console or our DAW to try and get two signals aligned; therefore, sounding better. What this does is to change the phase of the signal by  $180^\circ$ , or to reverse the polarity of it; essentially “turning your waveform upside down”. We're also used to aligning audio files so that peaks of layered sounds all happen at exactly the same point in time, therefore accounting for the timing differences between microphones due to their different distances from the source.

However, how many of us have ever thought that a signal could be out of phase with itself? Or, more correctly, how many of us ever thought that different frequencies within a signal could be out of phase with each other?

You'd be surprised how much this can affect your audio...

The below chart shows the phase response chart of the X-Desk unit:

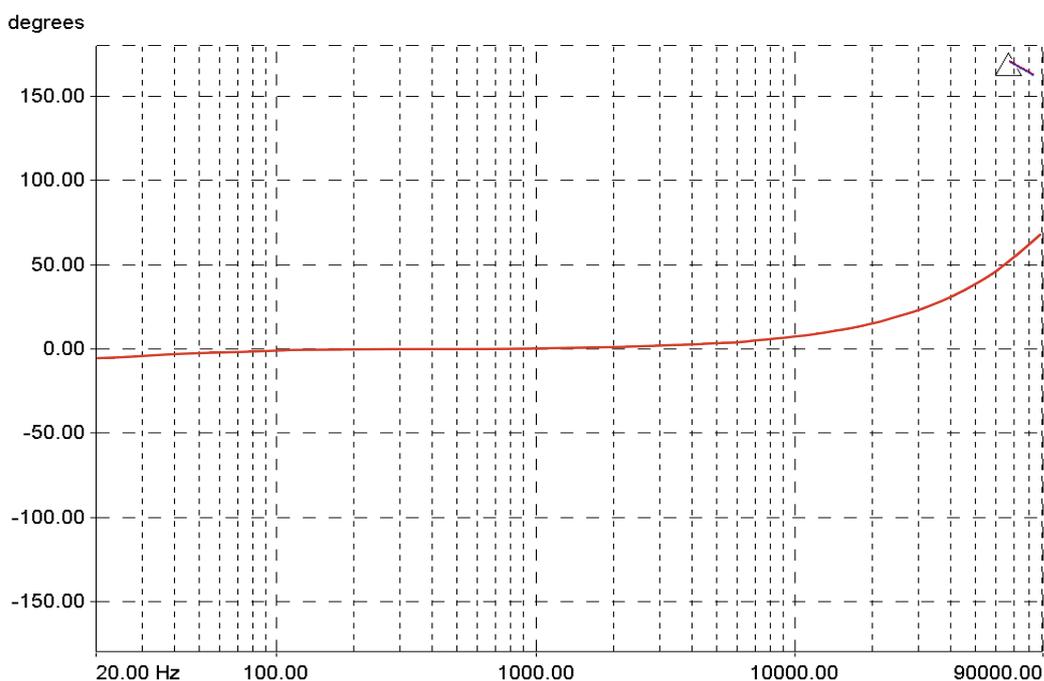

This line shows the phase relationship between different frequencies in the signal sent through the X-Desk. SSL products are known for their “width” and “depth” in the mix, and much of this is down to the phase relationships between different parts of the signal. You can see that there is a fairly large “flat” section of phase response between 80Hz and 2kHz. When audio passes through the X-Phase, the phase of these frequencies remains largely unaffected by passing through the circuit. However, looking to the right hand side of the chart you can see that a frequency of 20kHz is  $20^\circ$  out of phase with a frequency of 1kHz. This will affect how the frequencies in that signal interact by reinforcing and cancelling each other depending on their phase, which can lead to comb filtering.

You'd be amazed at some of the phase differences that happen when you run a signal through a device, with some particularly expensive devices having a  $\pm 70^\circ$  degree phase difference between the low and the high frequencies; meaning that different parts of the audio signal could be  $140^\circ$  out of phase with each other.

This is what X-Phase helps to solve; not only getting your signals in phase with each other, but also the frequencies within your signal to be in phase with themselves.

Here's the science...

## THE ALL-PASS FILTER IDEA

An all-pass filter is a signal processing filter that passes all frequencies equally in gain, but changes the phase relationship between various frequencies. All frequency components of a signal are delayed when passed through a device such as an amplifier, a loudspeaker, or when propagating through space or a medium such as air. This signal delay will be different for the various frequencies unless the device has the property of being linear phase. (Linear phase and minimum phase are often confused – they are quite different.)

The delay variation means that signals consisting of multiple frequency components will suffer distortion because these components are not delayed by the same amount of time at the output of the device. This changes the shape of the signal, in addition to any constant delay or scale change. A sufficiently large delay variation can cause problems such as poor fidelity in audio or intersymbol interference (ISI) in the demodulation of digital information from an analog carrier signal.

X-Phase can solve these problems; for example, by aligning the overhead microphones of a drumkit to the direct signals, while taking care of the fact that different frequencies need different delays.

Many people will be familiar with All-pass Filters as part of a loudspeaker processor, and this is a very good way to visualise them. Think about a two-way loudspeaker with a bass and high frequency driver. The acoustic centres of the two drivers are slightly different because of their physical placement. Even with the best crossover there are always frequencies that both drivers are reproducing at the same time. When the sound from each driver combines you will get ‘comb filtering’, or lobbing, as different wavelengths combine at different times. This will cause some frequencies to be completely cancelled, partly cancelled or combined to increase the level of others. These artifacts cannot be corrected using EQ filters. They can be used to partly mask the problem, but they won’t solve it.

So how can we fix this problem? The answer is to use an all-pass filter. By setting the correct frequency and steepness we can correct the phase differences between the drivers, allowing them to sum together more accurately at the crossover point. The all-pass filter acts like a tilt control, shifting the phase of some frequencies relative to others.

So how does this relate to the creative mixing process, rather than for correcting loudspeakers?

If we now take the principle of the loudspeaker alignment example and apply it in the same way to instrument inputs, it will become clearer where the all-pass filter solves problems in a way no other audio processing can.

Imagine recording bass, a kick drum, a snare, a piano, or any instrument that will involve more than one microphone for recording. Most engineers will use a combination of polarity switching and/or delay to try and align the two sources so that they combine more smoothly. But let's take the snare top and bottom mics as an example.

In the same way that the high and low frequency drivers of the loudspeaker have some frequencies that overlap, so do the snare top and bottom mics.

Most engineers will try switching the polarity, thinking that negative pressure on the snare top mic will be reproduced as positive pressure on the bottom. On a very simple level this is true, but the phase will not be consistent across the whole frequency range, so comb filtering will occur. Switching polarity will just accentuate some frequencies and filter out others, it will not allow the frequencies that both microphones are picking up to combine correctly in time.

Bass DI and microphone channels suffer from a similar problem, but this time engineers tend to reach for the delay, thinking that the mic signal is behind the DI in time. This is true to some degree, but the bass speaker also has its own frequency dependent phase response, which a delay can't fix because it affects all frequencies. Both these examples use a tool to try and fix a problem, but neither delay or polarity are the right tool. They are like a sledgehammer.

What we need is a more accurate and delicate tool, and this is where the all-pass filter comes in. This is more like a precision tool, like a scalpel. Let's take a different example; an acoustic piano. If you use three microphones for a piano they are all separated by different physical distances and are all picking up similar frequencies. But when you try and mix those three microphones together you will have a similar comb filtering effect to the loudspeaker once again. This will affect your tone and your gain before feedback. Once again, delay, polarity or EQ can't fix this problem, they can only mask it to some degree.

Using an all-pass filter, we can adjust the phase response of each mic input so that they combine together more coherently. This gives us a more natural overall tone from the piano and much higher gain before feedback as both the phase and frequency response is smoother. The all-pass filter is a tool like no other in a sound engineer's tool kit.

# 11. FlexVerb

## INTRODUCTION

The illustration below gives an overview of the FlexVerb features which are described in full over the following pages.

Above the main plug-in window is a set of controls that are specific to your host application. Please refer to your host application's user guide for guidelines on using these controls.

Internal bypass for smooth in/out comparisons.

Graphical EQ and Reverb Time Multiplier display with after-glow FFT.

Input side-chain Compressor with selectable presets.

Input level metering and control.

Early Reflections and Reverb Tail selection and blend.

Reverb Tail control section.

6-Band EQ knob and numerical control section.

3-Band Reverb Time Multipliers

Lockable Wet/Dry Mix Control

Output level metering and control.


## INTERFACE OVERVIEW

The basic interface techniques for the FlexVerb are largely identical to those for the Channel Strip.

### Automation

Automation support for FlexVerb is the same as for the Channel Strip.

### Plug-in Bypass

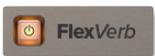


The **In/Out** switch located above the Input section provides an internal plug-in bypass. This allows for smoother In/Out comparisons by avoiding any latency issues associated with the host application's Bypass function.

## Presets

Factory presets are included in the plug-in installation, installed in the following locations:


**Mac:** Library/Application Support/Solid State Logic/SSLNative/Presets/FlexVerb

**Windows 64-bit:** C:\ProgramData\Solid State Logic\SSL Native\Presets\FlexVerb

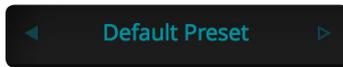

Switching between presets can be achieved by clicking the left/right arrows in the preset management section of the plug-in GUI, and by clicking on the preset name which will open the preset management display.


## Preset Management Display

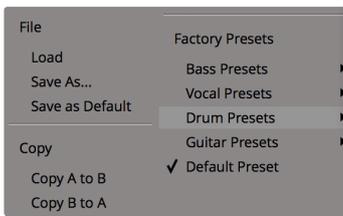

There are a number of options in the Preset Management Display:

- **Load** allows loading of presets not stored in the locations described above.
- **Save As...** allows for storage of user presets.
- **Save as Default** assigns the current plug-in settings to the Default Preset.
- **Copy A to B** and **Copy B to A** assigns the plug-in settings of one comparison setting to the other.

## A-B Comparisons

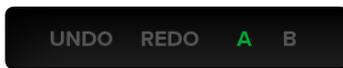


The **A B** buttons at the base of the screen allows you to load two independent settings and compare them quickly. When the plug-in is opened, setting **A** is selected by default. Clicking the **A** or **B** button will switch between setting **A** and setting **B**.

**UNDO** and **REDO** functions allow undo and redo of changes made to the plug-in parameters.

## Input and Output Levels

The input and output sections provide input and output gain control, and input/output metering. When clipping occurs, the meter will turn red. It will remain red until the meter is reset by clicking on the meter.

## FlexVerb Signal Flow

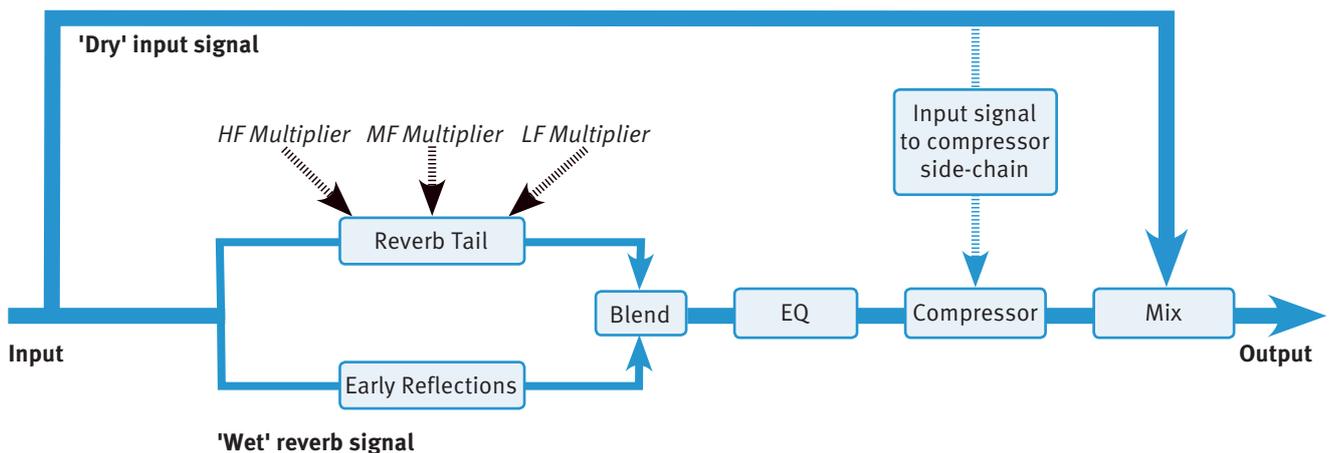

## Early Reflections and Reverb Tail Selection



There are four reverb types: Room, Hall, Plate and Chamber. Each reverb type has three sizes: Small, Medium, and Large.

Select the Early Reflection and Reverb Tail type and size by clicking on the dropdown selection boxes.

With the **LINK** engaged, selecting the Early Reflection Type and Size will allocate the same settings for the Reverb Tail. With the **LINK** disengaged, the Reverb Tail Type and Size is independent of the Early Reflections.

The **INFINITE** switch sets an infinite reverb time value, the **KILL** switch kills the reverb tail.

## Reverb Tail Control Section

This section describes the functionality of the control faders for adjusting the reverb tail settings.

Parameter	Description
Blend ER & Tail	The mix between the early reflections and the reverb tail.
Pre-Delay	The delay between the input signal and the reverb.
Diffusion	Adjusts the focus and definition in the reflections.
Size	Emulates the size of a space, altering the quantity and speed of the reflections.
Reverb Time	The length of the reverb tail.
Modulation Rate & Depth	Applies light frequency modulation to the reverb, giving a more natural sounding reverb tail.

## 3-Band Reverb Time Multipliers

The reverb tail is split into three frequency bands with adjustable crossover points. Each of these frequency bands has an adjustable reverb time; the multipliers increase or decrease the reverb time parameter in the Reverb Tail control section (detailed above) for each frequency band. This is a useful way to shape the tonal quality of the reverb, and gives a more natural sound than using EQ.



## 6-Band EQ

Six bands of EQ can be applied to the reverb tail to shape overall reverb tone. This includes two parametric bands, high-shelf and low shelf bands, as well as high-pass and low-pass filters. The EQ only affects the reverb; it does not affect the input source signal.



## Input Side-Chain Compressor




A compressor is applied to the output of the reverb with nine presets (fixed attack, release, and ratio settings), and adjustable threshold control. The compressor's side-chain is fed by the dry input signal.

This is useful, for example, to sit a larger-than-life vocal reverb in a busy mix; when there are vocals in the track, the accompanying reverb is automatically reduced in volume until the vocals stop, allowing the reverb to increase in level, giving the impression of a larger-than-life reverb without masking the intelligibility of the vocals.

## Graphical Display

The graphical display shows:

- The resultant curve of the EQ section that can be adjusted from the draggable circular nodes.
- The reverb time multiplier crossover points and values that can be adjusted from the draggable square nodes.
- An FFT analysis with after-glow.

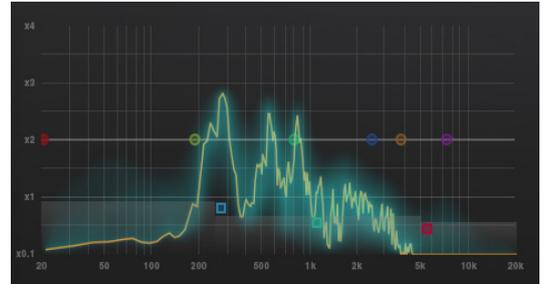

The FFT can be switched off by right-click/ctrl-clicking the graphical display, and selecting 'off'.

## Mix



A Dry/Wet control for applying reverb directly to channel processing, rather than via an aux send.

The lock function excludes the mix control parameter from the preset management system.

The lock function is useful, for example, when switching between multiple presets; set the mix control to the preferred blend of 'Dry' input signal and 'Wet' reverb signal, then audition different reverb presets without affecting the mix.

# Solid State Logic

O X F O R D • E N G L A N D

Visit SSL at: [www.solidstatelogic.com](http://www.solidstatelogic.com)

82BDNM01E

© Solid State Logic

All rights reserved under International and Pan-American Copyright Conventions

**SSL®** and **Solid State Logic®** are ® registered trademarks of Solid State Logic. **SSL Native™** is a trademark of Solid State Logic.

All other product names and trademarks are the property of their respective owners and are hereby acknowledged.

No part of this publication may be reproduced in any form or by any means, whether mechanical or electronic, without the written permission of Solid State Logic, Oxford, OX5 1RU, England

As research and development is a continual process, Solid State Logic reserves the right to change the features and specifications described herein without notice or obligation.

Solid State Logic cannot be held responsible for any loss or damage arising directly or indirectly from any error or omission in this manual.

E&OE